

# IVI-4.12: IviCounter Class Specification

September 6, 2017 Edition Revision 2.0

# Important Information

The IVI-4.12: IviCounter Class Specification is authored by the IVI Foundation member companies. For a vendor membership roster list, please visit the IVI Foundation web site at www.ivifoundation.org.

The IVI Foundation wants to receive your comments on this specification. You can contact the Foundation through the web site at www.ivifoundation.org.

### Warranty

The IVI Foundation and its member companies make no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The IVI Foundation and its member companies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

#### Trademarks

Product and company names listed are trademarks or trade names of their respective companies.

No investigation has been made of common-law trademark rights in any work.

1	Ove	erview	of the IviCounter Specification	9
	1.1	Introdu	uction	9
	1.2	IviCou	unter Class Overview	9
	1.3		ences	
	1.4	Definit	tions of Terms and Acronyms	10
2	IviC	Counte	er Class Capabilities	11
	2.1		uction	
	2.2	IviCou	unter Group Names	11
	2.3	Repeat	ted Capability Names	12
		2.3.1	Channel	
	2.4	Boolea	an Attribute and Parameter Values	12
	2.5		Namespace	
	2.6	.NET I	IviCounter Session Factory	12
3	Ger	neral R	Requirements	15
	3.1		num Class Compliance	
	5.1	3 1 1	Disable	
	3.2	0.1.1	ility Group Compliance	
4			rBase Capability Group	
	4.1		unterBase Capability Group Overview	
	4.2		ınterBase Attributes	
		4.2.1	Measurement Function	
		4.2.2	Channel Count	
		4.2.3	Channel Name (IVI-COM and IVI.NET Only)	
		4.2.4	Channel Item (IVI-COM and .NET Only)	
		4.2.5	Channel Impedance	
		4.2.6	Channel Coupling	
		4.2.7	Channel Attenuation	29
		4.2.8	Channel Level	
		4.2.9	Channel Hysteresis	
		4.2.10	Channel Slope	32
		4.2.11		34
		4.2.12	Frequency Channel	35
		4.2.13	Frequency Estimate	36
		4.2.14	Frequency Resolution	37
		4.2.15	1 3 1	
		4.2.16	Frequency Estimate Auto	39

4.2.17	Frequency Resolution Auto	
4.2.18	Period Channel	
4.2.19	Period Estimate	
4.2.20	Period Resolution.	43
4.2.21	Period Aperture Time	44
4.2.22	Pulse Width Channel	45
4.2.23	Pulse Width Estimate	46
4.2.24	Pulse Width Resolution	47
4.2.25	Duty Cycle Channel	48
4.2.26	Duty Cycle Frequency Estimate	
4.2.27	Duty Cycle Resolution.	
4.2.28	Edge Time Channel	
4.2.29	Edge Time Reference Type	
4.2.30	Edge Time Estimate	
4.2.31	Edge Time Resolution	
4.2.32	Edge Time High Reference	
4.2.33	Edge Time Low Reference	
4.2.34	Frequency Ratio Numerator Channel	
4.2.35	Frequency Ratio Denominator Channel	
4.2.36	Frequency Ratio Numerator Frequency Estimate	
	Frequency Ratio Estimate	
4.2.37	1 2	
4.2.38	Frequency Ratio Resolution.	
4.2.39	Time Interval Start Channel	
4.2.40	Time Interval Stop Channel	
4.2.41	Time Interval Estimate.	
4.2.42	Time Interval Resolution	
4.2.43	Phase Input Channel	
4.2.44	Phase Reference Channel	
4.2.45	Phase Frequency Estimate	
4.2.46	Phase Resolution	
4.2.47	Continuous Totalize Channel	
4.2.48	Gated Totalize Channel	
4.2.49	Gated Totalize Gate Source	
4.2.50	Gated Totalize Gate Slope	74
4.2.51	Timed Totalize Channel.	
4.2.52	Timed Totalize Gate Time	77
4.2.53	Start Arm Type	78
4.2.54	External Start Arm Source	80
4.2.55	External Start Arm Level	81
4.2.56	External Start Arm Slope	82
4.2.57	External Start Arm Delay	
4.2.58	Stop Arm Type	
4.2.59	External Stop Arm Source	
4.2.60	External Stop Arm Level	
4.2.61	External Stop Arm Slope	
4.2.62	External Stop Arm Delay	
	sterBase Functions	
4.3.1	Abort	
4.3.2	Is Measurement Complete	
4.3.3	Get Channel Name (IVI-C Only).	
4.3.4	Configure Channel	
4.3.5	Configure Level	
4.3.6	Configure Slope (IVI-C Only)	
4.3.0	Configure Filter Enabled (IVI-C Only)	102

4.3

		4.3.8	Configure Frequency	104
		4.3.9	Configure Frequency With Aperture Time	106
		4.3.10	Configure Period	107
		4.3.11	Configure Period With Aperture Time	108
		4.3.12	Configure Pulse Width	109
		4.3.13	Configure Duty Cycle	110
		4.3.14	Configure Edge Time	113
		4.3.15	Configure Edge Time Reference Levels	113
		4.3.16	Configure Frequency Ratio	115
		4.3.17	Configure Time Interval	113
		4.3.18	Configure Phase	119
		4.3.19	Configure Continuous Totalize	121
		4.3.20	Start Continuous Totalize	122
		4.3.21	Stop Continuous Totalize	123
		4.3.22	Fetch Continuous Totalize Count	124
		4.3.23	Configure Gated Totalize	125
		4.3.24	Configure Timed Totalize	126
		4.3.25	Configure Start Arm (IVI-C Only)	123
		4.3.26	Configure External Start Arm	128
		4.3.27	Configure Stop Arm (IVI-C Only)	
		4.3.28	Configure External Stop Arm	131
		4.3.29	Fetch	133
		4.3.30	Initiate	135
		4.3.31	Read	136
	4.4	IviCou	nterBase Behavior Model	139
	5.1 5.2	IviCou	rFilter Extension Group  nterFilter Extension Group Overview  nterFilter Attributes  Minimum Frequency	141 141
		5.2.2	Maximum Frequency	
	5.3	IviCou	nterFilter Function	
		5.3.1	Configure Filter	145
	5.4	IviCou	nterFilter Behavior Model	146
	5.5	IviCou	nterFilter Compliance Notes	146
5	IviC		rTimeIntervalStopHoldoff Extension Group	
	6.1		nterTimeIntervalStopHoldoff Extension Group Overview	
	6.2	IviCou	nterTimeIntervalStopHoldoff Attribute	
		6.2.1	Time Interval Stop Holdoff	
	6.3		nterTimeIntervalStopHoldoff Function	
		6.3.1	Configure Time Interval Stop Holdoff (IVI-C Only)	
	6.4		nterTimeIntervalStopHoldoff Behavior Model	
	6.5	IviCou	nterTimeIntervalStopHoldoff Compliance Notes	151
7	IviC	Counter	rVoltageMeasurement Extension Group	152
	7.1		nterVoltageMeasurement Extension Group Overview	
	7.2		nterVoltageMeasurement Attributes	
		7.2.1	Voltage Channel	
		7.2.2	Voltage Estimate	
		722	Voltage Desclution	154

	7.3	IviCounterVoltageMeasurement Function	156
		7.3.1 Configure Voltage Measurement	157
	7.4	IviCounterVoltageMeasurement Behavior Model	159
	7.5	IviCounterVoltageMeasurement Compliance Notes	
8	IviCo	ounterEdgeTimeReferenceLevels Extension Group	160
Ü	8.1	IviCounterEdgeTimeReferenceLevels Extension Group Overview	
	8.2	IviCounterEdgeTimeReferenceLevels Behavior Model	
	8.3	IviCounterEdgeTimeReferenceLevels Compliance Notes	
	0.5	TyreounterEage I micreterenceEevers compitance Notes	100
9	IviCo	ounter Attribute ID Definitions	161
10	IviCo	ounter Attribute Value Definitions	164
11	IviCo	ounter Function Parameter Value Definitions	168
12	IviCo	ounter Error, Completion Code, and Exception Class	
		<u>.</u>	
De III	nition	s 169	
1.0	T :0		171
13		ounter Hierarchies	
	13.1	IviCounter COM Hierarchy	
		13.1.1 IviCounter COM Interfaces	
		13.1.2 IviCounter COM Interface Reference Properties	
		13.1.3 IviCounter COM Category	178
	13.2	IviCounter C Function Hierarchy	179
	13.3	IviCounter C Attribute Hierarchy	181
	13.4	IviCounter .NET Hierarchy	184
		13.4.1 IviCounter .NET Interface Reference Properties	
Appo	endix	A Specific Driver Development Guidelines	188
	A.1	Introduction	188
	A.2	Disabling Unused Extensions	188
	A.3	Query Instrument Status	189
			400
App	endix		
	B.1	Introduction	190
	B.2	When to Perform Interchangeability Checking	
	B.3	Interchangeability Checking of Measurement Function Attributes	
	B.4	Interchangeability Checking Rules	192

# IviCounter Class Specification

# IviCounter Revision History

This section is an overview of the revision history of the IviCounter specification.

Table 1-1. IviCounter Class Specification Revisions

Revision Number	Date of Revision	Revision Notes	
Revision 1.0	5/7/2009		
Revision 2.0	June 9, 2010	Incorporated IVI.NET	
Revision 2.0	August 25, 2011	Editorial IVI.NET change.	
		Change references to process-wide locking to AppDomain-wide locking.	
		Add an overload to the Create factory method that takes locking related parameters.	
Revision 2.0	June 21, 2013	Editorial IVI.NET change.	
		Rename the IsMeasurementComplete() method to GetMeasurementComplete().	
Revision 2.0	November 21, 2013	Editorial IVI.NET change.	
		Updated the Filter.Configure() method to ConfigureFilter().	
Revision 2.0	September 24, 2015	Editorial Change – Clarified the use of one-based index for COM, and zero-based index for .NET for repeated capabilities in section 4.2.3.	
Revision 2.0	October 14, 2016	Editorial Change – Modified header text for table 12.2 to indicate that the messages do not apply to .NET exceptions.	
Revision 2.0	September 6, 2017	Editorial Change – Updated the name of the attribute value identifier for the Arm Type attribute in Sections 4.2.53 and 4.2.58 to match the name in Section 10.	

### **API Versions**

Architecture	Drivers that comply with version 2.0 comply with all of the versions below
С	1.0, 2.0

COM	1.0, 2.0
.NET	2.0

Drivers that comply with this version of the specification also comply with earlier, compatible, versions of the specification as shown in the table above. The driver may benefit by advertising that it supports all the API versions listed in the table above.

# 1 Overview of the IviCounter Specification

#### 1.1 Introduction

This specification defines the IVI class for counter timers. The IviCounter class is designed to support the typical counter timer as well as common extended functionality found in more complex instruments. This section summarizes the *IviCounter Specification* itself and contains general information that the reader may need in order to understand, interpret, and implement aspects of this specification. These aspects include the following:

- IviCounter Class Overview
- References
- Definitions of Terms and Acronyms

#### 1.2 IviCounter Class Overview

This specification defines the IVI class for counters. The IviCounter class is designed to support the typical frequency time interval counter as well as common extended functionality found in instruments that are more complex. The IviCounter class conceptualizes a counter as an instrument that can measure frequency of a signal, and can often perform the following measurements:

- Measure periods
- Measure pulse widths
- Measure rise and fall times
- Measure intervals between two events on different channels
- Measure phase between two signals
- Measure duty cycle of a signal
- Measure ratio of frequencies of two signals
- Totalize events

The IviCounter class is divided into the base capability group and extension groups. The IviCounterBase capability group is used to configure a counter for single and dual channel measurements as described in Section 4, *IviCounter Base Capability Group*.

In addition to the base capabilities, the IviCounter class defines extended capabilities for counters that have:

- High, low, and band pass filtering
- Time Interval Stop Holdoff
- Voltage Measurement

The IviCounter extended capabilities are arranged into a set of extension capability groups.

### 1.3 References

Several other documents and specifications are related to this specification. These other related documents are the following:

- IVI-3.1: Driver Architecture Specification
- IVI-3.2: Inherent Capabilities Specification
- IVI-3.3: Standard Cross-Class Capabilities Specification
- IVI-3.18: IVI.NET Utility Classes and Interfaces Specification
- IVI-5.0: Glossary

# 1.4 Definitions of Terms and Acronyms

This section defines terms and acronyms that are specific to the IviCounter class.

To make a measurement there must be: Arming, Gating and a Trigger, all of which are events.

Arming A pre-trigger condition that must be fulfilled before a measurement is

allowed to start or stop.

Estimate The approximate expected measurement value.

Event A signal on a measurement channel passing through a specific voltage

level with a specific slope.

External Arming The start and stop arm may be configured to allow start and stop on

rising or falling edges or both from an external source. Delays after

start arm and/or stop arm may be programmed.

External Gating Gating from an external source.

Gating Time during which measurement is made.

Immediate Arming Always armed. The programmed aperture time defines the start arm

(synchronized with the trigger threshold) and the measurement time.

Internal Gating The programmed aperture time defines the gate which is synchronized

with the trigger threshold.

Resolution The smallest distinguishable value required from a measurement. It is

the quantization size, i.e. the smallest delta value that can be detected.

Trigger The threshold at which measurement commences.

Trigger Level The specific voltage level at which a Trigger occurs.

Trigger Slope The direction of the voltage change that produces a Trigger. The

voltage change for Positive slope is from a lower voltage level to a higher voltage level. The voltage change for Negative slope is from a

higher voltage level to a lower voltage level.

# 2 IviCounter Class Capabilities

### 2.1 Introduction

The IviCounter specification divides generic counter timer capabilities into a base capability group and multiple extension capability groups. Each capability group is discussed in a separate section. This section defines names for each capability group and gives an overview of the information for each capability group.

# 2.2 IviCounter Group Names

The capability group names for the IviCounter class are defined in the following table. The Group Name is used to represent a particular capability group and is returned as one of the possible group names from the Group Capabilities attribute.

Table 2-1. IviCounter Group Names

Group Name	Description
IviCounterBase	Base Capability Group: Configures, initiates, and returns results of a frequency measurement on any counter compliant with this class. This group defines a number of functions that are relevant in many of the other groups.
IviCounterFilter	Extension Group: IviCounter with the capability to specify the filter minimum and maximum frequencies of the input signal.
IviCounterTimeIntervalStopHoldoff	Extension Group: IviCounter with the capability to holdoff the stop trigger for time interval measurements.
IviCounterVoltageMeasurement	Extension Group: IviCounter with the capability to make voltage measurements.
IviCounterEdgeTimeReferenceLevels	Extension Group: IviCounter with the capability to make Percentage based Edge Time measurements.

# 2.3 Repeated Capability Names

The IviCounter Class Specification defines one repeated capability. Refer to the sections of *IVI-3.1: Driver Architecture Specification* that deal with repeated capabilities. The relevant sections are Section 2.7, *Repeated Capabilities*, Section 4.1.9, *Repeated Capabilities*, Section 4.2.5, *Repeated Capabilities*, Section 4.3.9, *Repeated Capabilities*, and Section 5.9, *Repeated Capability Identifiers and Selectors*. The following are repeated capabilities for the IviCounter Class Specification.

Channel

### 2.3.1 Channel

In the configuration store, the name for the channel repeated capability shall be exactly one of "Channel" or "IviCounterChannel". Drivers that implement multiple repeated capabilities with the name "Channel" shall use the latter form to disambiguate the names.

### 2.4 Boolean Attribute and Parameter Values

This specification uses True and False as the values for Boolean attributes and parameters. The following table defines the identifiers that are used for True and False in the IVI.NET, IVI-COM, and IVI-C architectures.

Boolean Value	IVI.NET Identifier	IVI-COM Identifier	IVI-C Identifier
True	true	VARIANT_TRUE	VI_TRUE
False	false	VARIANT_FALSE	VI_FALSE

### 2.5 .NET Namespace

The .NET namespace for the IviCounter class is Ivi.Counter.

### 2.6 .NET IviCounter Session Factory

The IviCounter .NET assembly contains a factory method called Create for creating instances of IviCounter class-compliant IVI.NET drivers from driver sessions and logical names. Create is a static method accessible from the static IviCounter class.

Refer to *IVI-3.5: Configuration Server Specification* for a description of how logical names and session names are defined in the configuration store.

Refer to Section 8, *IVI.NET Specific Driver Constructor*, of *IVI-3.2: Inherent Capabilities Specification*, for more details on how the idquery, reset, and options parameters affect the instantiation of the driver.

Refer to Section 4.3.11, *Multithread Safety*, of *IVI-3.1: Driver Architecture Specification* for a complete description of IVI.NET driver locking. Refer to Section 8, Table 8.2 *Required Lock Type Behavior for Drivers With the Same Access Key*, of *IVI-3.2, Inherent Capability Specification*, for an explanation of how the values for lockType and accessKey are used to determine the kind of multithreaded lock to use for the driver instance.

# .NET Method Prototype

### **Parameters**

Inputs	Description	Base Type
name	A session name or a logical name that points to a session that uses an IVI.NET IviCounter class-compliant driver.	String
idQuery	Specifies whether to verify the ID of the instrument. The default is False.	Boolean
reset	Specifies whether to reset the instrument. The default is False.	
lockType	Specifies whether to use AppDomain-wide locking or machine-wide locking.	Ivi.Driver.LockType
accessKey	Specifies a user-selectable access key to identify the lock. Driver instances that are created with the same accessKey will be protected from simultaneous access by multiple threads within an AppDomain or across AppDomains, depending upon the value of the lockType parameter.	String
A string that allows the user to specify the initial values of certain inherent attributes. The default is an empty string.		String

Outputs	Description	Base Type
Return Value	Interface reference to the IIviCounter interface of the driver referenced by session.	IIviCounter

### **Defined Values**

Name	Description			
	Language Identifier		Identifier	
AppDomain	The	The lock is AppDomain-wide.		
		.NET	Ivi.Driver.LockType.AppDomain	
Machine	The	The lock is machine-wide.		
	.NET Ivi.Driver.LockType.Machine			

### .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this method.

### Usage

To create a driver that implements the IviCounter instrument class API from the logical name "My LogicalName", use the following:

```
IIviCounter counter = IviCounter.Create("MyLogicalName");
```

In this case, the ID of the instrument will not be verified, the instrument will not be reset, and options will be supplied from the configuration store and/or driver defaults.

# 3 General Requirements

This section describes the general requirements a specific driver shall meet in order to be compliant with this specification. In addition, it provides general requirements that specific drivers shall meet in order to comply with a capability group, attribute, or function.

# 3.1 Minimum Class Compliance

To be compliant with the IviCounter Class Specification, an IVI specific driver shall conform to the requirements for an IVI class-compliant specific driver as specified in IVI-3.1: *Driver Architecture Specification*, implement the inherent capabilities defined by IVI-3.2: *Inherent Capabilities Specification*, and implement the IviCounterBase capability group.

### 3.1.1 Disable

Refer to IVI-3.2: *Inherent Capabilities Specification* for the prototype of this function. The IviCounter specification does not define additional requirements on the Disable function.

# 3.2 Capability Group Compliance

IVI-3.1: *Driver Architecture Specification* defines the general rules for a specific driver to be compliant with a capability group.

# 4 IviCounterBase Capability Group

# 4.1 IviCounterBase Capability Group Overview

To measure frequency, the counter counts number of crossings of the measured signal through a given level at a given slope. Built-in hysteresis is used to reject signal noise. The counter takes the measurement for a specific amount of time called the gating time. Some counters provide autotrigger, which enables them to measure frequency without specifying level and direction of the crossing. Refer to the Section 4.4, *IviCounterBase Behavior Model* for a detailed description of the counter behavior and the usage of estimate and resolution attributes.

The most general triggering scheme for frequency or period measurement is given below.

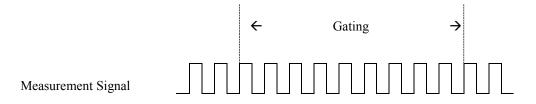


Figure 4-1 Typical Counter Timer Diagram

### 4.2 IviCounterBase Attributes

The IviCounterBase capability group defines the following attributes:

- Measurement Function
- Channel Count
- Channel Name (IVI-COM and IVI.NET Only)
- Channel Item (IVI-COM and IVI.NET Only)
- Channel Impedance
- Channel Coupling
- Channel Attenuation
- Channel Level
- Channel Hysteresis
- Channel Slope
- Channel Filter Enabled

- Frequency Channel
- Frequency Estimate
- Frequency Resolution
- Frequency Aperture Time
- Frequency Estimate Auto
- Frequency Resolution Auto
- Period Channel
- Period Estimate
- Period Resolution
- Period Aperture Time
- Pulse Width Channel
- Pulse Width Estimate
- Pulse Width Resolution
- Duty Cycle Channel
- Duty Cycle Frequency Estimate
- Duty Cycle Resolution
- Edge Time Channel
- Edge Time Estimate
- Edge Time Resolution
- Edge Time High Reference
- Edge Time Low Reference
- Frequency Ratio Numerator Channel
- Frequency Ratio Denominator Channel
- Frequency Ratio Numerator Frequency Estimate
- Frequency Ratio Estimate
- Frequency Ratio Resolution
- Time Interval Start Channel
- Time Interval Stop Channel
- Time Interval Estimate

- Time Interval Resolution
- Phase Input Channel
- Phase Reference Channel
- Phase Frequency Estimate
- Phase Resolution
- Continuous Totalize Channel
- Gated Totalize Channel
- Gated Totalize Gate Source
- Gated Totalize Gate Slope
- Timed Totalize Channel
- Timed Totalize Gate Time
- Start Arm Type
- External Start Arm Source
- External Start Arm Level
- External Start Arm Slope
- External Start Arm Delay
- Stop Arm Type
- External Stop Arm Source
- External Stop Arm Level
- External Stop Arm Slope
- External Stop Arm Delay

This section describes the behavior and requirements of each attribute. The actual value for each attribute ID is defined in Section 9, *IviCounter Attribute ID Definitions*.

### 4.2.1 Measurement Function

Data Type	Access	Applies to	Coercion	High Level Functions
ViInt32	R/W	N/A	None	Configure Frequency
				Configure Frequency Manual
				Configure Frequency With Aperture Time
				Configure Period
				Configure Period With Aperture Time
				Configure Pulse Width
				Configure Duty Cycle
				Configure Edge Time
				Configure Edge Time Reference Levels
				Configure Frequency Ratio
				Configure Time Interval
				Configure Phase
				Configure Continuous Totalize
				Configure Gated Totalize
				Configure Timed Totalize
				Configure Voltage Measurement

# .NET Property Name

MeasurementFunction

#### .NET Enumeration Name

MeasurementFunction

### COM Property Name

Function

### COM Enumeration Name

IviCounterMeasurementFunctionEnum

### C Constant Name

IVICOUNTER\_ATTR\_MEASUREMENT\_FUNCTION

### Description

Specifies the current measurement function of the Counter. The user sets the function by calling one of the configure measurement functions or the set attribute function. See configure measurement functions for

details on setting up a measurement. See the behavior model for proper usage of the Measurement Function attribute.

# .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

### Defined Values

Name	Description	scription			
	Langu	nage Identifier			
Frequency	Sets the Cou	unter to measure Frequency.			
	С	IVICOUNTER_VAL_FREQUENCY			
	COM	IviCounterFunctionFrequency			
	.NET	MeasurementFunction.Frequency			
Frequency with Aperture	Sets the Cou	inter to measure Frequency with Aperture.			
	С	IVICOUNTER_VAL_FREQUENCY_WITH_APERTURE			
	COM	IviCounterFunctionFrequencyWithAperture			
	.NET	MeasurementFunction.FrequencyWithAperture			
Period	Sets the Cou	anter to measure Period.			
	С	IVICOUNTER_VAL_PERIOD			
	COM	IviCounterFunctionPeriod			
	.NET	MeasurementFunction.Period			
Period with Aperture	Sets the Cou	ets the Counter to measure Period with Aperture.			
	С	IVICOUNTER_VAL_PERIOD_WITH_APERTURE			
	COM	IviCounterFunctionPeriodWithAperture			
	.NET	MeasurementFunction.PeriodWithAperture			
Pulse Width	Sets the Cou	inter to measure Pulse Width.			
	С	IVICOUNTER_VAL_PULSE_WIDTH			
	COM	IviCounterFunctionPulseWidth			
	.NET	MeasurementFunction.PulseWidth			
Duty Cycle	Sets the Cou	ets the Counter to measure Duty Cycle.			
	С	IVICOUNTER_VAL_DUTY_CYCLE			
	COM	IviCounterFunctionDutyCycle			
	.NET	MeasurementFunction.DutyCylce			
Edge Time	Sets the Cou	unter to measure Edge Time.			

]		T					
	С	IVICOUNTER_VAL_EDGE_TIME					
	COM	IviCounterFunctionEdgeTime					
	.NET	MeasurementFunction.EdgeTime					
Frequency Ratio	Sets the Counter to measure Frequency Ratio.						
	C	IVICOUNTER_VAL_FREQUENCY_RATIO					
	COM	IviCounterFunctionFrequencyRatio					
	.NET	MeasurementFunction.FrequencyRatio					
Time Interval	Sets the Counter	to measure Time Interval.					
	С	IVICOUNTER_VAL_TIME_INTERVAL					
	COM	IviCounterFunctionTimeInterval					
	.NET	MeasurementFunction.TimeInterval					
Phase	Sets the Counter	to measure Phase.					
	С	IVICOUNTER_VAL_PHASE					
	COM	IviCounterFunctionPhase					
	.NET	MeasurementFunction.Phase					
Continuous Totalize	Sets the Counter to measure Continuous Totalize.						
	С	IVICOUNTER_VAL_CONTINUOUS_TOTALIZE					
	COM	IviCounterFunctionContinuousTotalize					
	.NET	MeasurementFunction.ContinuousTotalize					
Gated Totalize	Sets the Counter	to measure Gated Totalize.					
	С	IVICOUNTER_VAL_GATED_TOTALIZE					
	COM	IviCounterFunctionGatedTotalize					
	.NET	MeasurementFunction.GatedTotalize					
Timed Totalize	Sets the Counter	to measure Timed Totalize.					
	С	IVICOUNTER_VAL_TIMED_TOTALIZE					
	COM	IviCounterFunctionTimedTotalize					
	.NET	MeasurementFunction.TimedTotalize					
DC Voltage	Sets the Counter	to measure DC Voltage.					
	С	IVICOUNTER_VAL_DC_VOLTAGE					
	СОМ	IviCounterFunctionDCVoltage					
	.NET	MeasurementFunction.DCVoltage					
Maximum Voltage	Sets the Counter	to measure Maximum Voltage.					
	С	IVICOUNTER_VAL_MAXIMUM_VOLTAGE					
	COM	IviCounterFunctionMaximumVoltage					
1		1					

		.NET	MeasurementFunction.MaximumVoltage			
Minimum Voltage	Sets the Counter to measure Minimum Voltage.					
		С	IVICOUNTER_VAL_MINIMUM_VOLTAGE			
		COM	IviCounterFunctionMinimumVoltage			
		.NET	MeasurementFunction.MinimumVoltage			
RMS Voltage	Sets the Counter to measure RMS Voltage.					
		С	IVICOUNTER_VAL_RMS_VOLTAGE			
		COM	IviCounterFunctionRMSVoltage			
		.NET	MeasurementFunction.RMSVoltage			
Peak-to-Peak Voltage	Sets the Counter to measure Peak-to-Peak Voltage.					
		С	IVICOUNTER_VAL_PEAK_TO_PEAK_VOLTAGE			
		COM	IviCounterFunctionPeakToPeakVoltage			
		.NET	MeasurementFunction.PeakToPeakVoltage			

# **Compliance Notes**

1. If an IviCounter specific driver implements any of the defined values in the following table, it shall also implement the corresponding capability group:

Value	Required Capability Group
DC Voltage	IviCounterVoltageMeasurement
Maximum Voltage	IviCounterVoltageMeasurement
Minimum Voltage	IviCounterVoltageMeasurement
RMS Voltage	IviCounterVoltageMeasurement
Peak-to-Peak Voltage	IviCounterVoltageMeasurement

- 2. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_MEASUREMENT\_FUNCTION\_CLASS\_EXT\_BASE and less than IVICOUNTER VAL MEASUREMENT FUNCTION SPECIFIC EXT BASE.
- 3. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER VAL MEASUREMENT FUNCTION SPECIFIC EXT BASE.
- 4. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_MEASUREMENT\_FUNCTION\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_MEASUREMENT\_FUNCTION\_SPECIFIC\_EXT\_BASE and IVICOUNTER VAL MEASUREMENT FUNCTION CLASS EXT BASE.

### 4.2.2 Channel Count

Data Type	Access	Applies to	Coercion	High Level Functions
ViInt32	RO	N/A	None	None

### .NET Property Name

Channels.Count

 $This \ property \ is \ inherited \ from \ the \ base \ interface \ \verb|IIviRepeatedCapabilityIdentification|.$ 

# **COM Property Name**

Channels.Count

### **C** Constant Name

IVICOUNTER ATTR CHANNEL COUNT

### Description

Returns the number of available channels.

### .NET Exceptions

# 4.2.3 Channel Name (IVI-COM and IVI.NET Only)

Data Type	Access	Applies to	Coercion	<b>High Level Functions</b>
ViString	RO	Channels	None	None

### .NET Property Name

Channels[].Name

This property is inherited from  ${\tt IIviRepeatedCapabilityIdentification.}$ 

# **COM Property Name**

### **C** Constant Name

N/A

(Use the GetChannelName function.)

### **Description**

Returns the physical repeated capability identifier defined by the specific driver for the channel that corresponds to the index that the user specifies.

In COM, the index is one-based. In .NET, the index is zero-based.

Valid values for the Index parameter are between one and the value of the Channel Count attribute. If the user passes an invalid value for the Index parameter, the value of this attribute is an empty string.

### .NET Exceptions

# 4.2.4 Channel Item (IVI-COM and .NET Only)

Data Type	Access	Applies to	Coercion	<b>High Level Functions</b>
IIviCounterChannel*	RO	Channels	None	None

### .NET Property Name

```
Channels[String name]
```

This indexer is inherited from IIviRepeatedCapabilityCollection. The string parameter uniquely identifies a particular channel in the ChannelsCollection.

### **COM Property Name**

#### **C Constant Name**

N/A

# Description

Channel Item uniquely identifies a channel in the channels collection. It returns an interface pointer which can be used to control the attributes and other functionality of that channel.

The Item property takes a channel name. If the user passes an invalid value for the channel name parameter, the property returns an error.

Valid names include physical repeated capability identifiers and virtual repeated capability identifiers.

### .NET Exceptions

# 4.2.5 Channel Impedance

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViReal64	R/W	Channels	Up	Configure Channel

# .NET Property Name

Channels[].Impedance

### COM Property Name

Channels.Item().Impedance

# C Constant Name

IVICOUNTER\_ATTR\_IMPEDANCE

### Description

Specifies the input impedance of the channel in Ohms.

Common values are 50, 75, and 1,000,000.

### .NET Exceptions

# 4.2.6 Channel Coupling

Data Type	Access	Applies to	Coercion	High Level Functions
ViInt32	R/W	Channels	None	Configure Channel

# .NET Property Name

Channels[].Coupling

#### .NET Enumeration Name

Coupling

# COM Property Name

Channels.Item().Coupling

### COM Enumeration Name

IviCounterCouplingEnum

### C Constant Name

IVICOUNTER\_ATTR\_COUPLING

### Description

Specifies the electrical coupling method used on the input channel.

### Defined Values

Name	Descrip	otion			
		Language	Identifier		
AC	The cou	ınter AC couple	s the channel signal.		
		С	IVICOUNTER_VAL_AC		
		COM	IviCounterCouplingAC		
		.NET	Coupling.AC		
DC	The cou	ınter DC couple	s the channel signal.		
		С	IVICOUNTER_VAL_DC		
		COM	IviCounterCouplingDC		
		.NET	Coupling.DC		

### .NET Exceptions

### Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_COUPLING\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_COUPLING\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_COUPLING\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_COUPLING\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_COUPLING\_SPECIFIC\_EXT\_BASE and IVICOUNTER VAL COUPLING CLASS EXT BASE.

### 4.2.7 Channel Attenuation

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	Channels	None	Configure Channel

### .NET Property Name

Channels[].Attenuation

### COM Property Name

Channels. Item(). Attenuation

# C Constant Name

IVICOUNTER\_ATTR\_ATTENUATION

### Description

Specifies the scale factor by which the channel attenuates the input. Increasing this value decreases the sensitivity. For instance, setting this value to 10 attenuates the input by a factor of 10.

### .NET Exceptions

# 4.2.8 Channel Level

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	Channels	None	Configure Level

### .NET Property Name

Channels[].Level

### COM Property Name

Channels.Item().Level

### C Constant Name

IVICOUNTER\_ATTR\_CHANNEL\_LEVEL

### Description

Specifies the voltage level the input signal must pass through to produce a count. Level is specified as the voltage at the input terminals and is independent of attenuation.

### .NET Exceptions

# 4.2.9 Channel Hysteresis

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	Channels	None	Configure Level

### .NET Property Name

Channels[].Hysteresis

### COM Property Name

Channels.Item().Hysteresis

### C Constant Name

IVICOUNTER\_ATTR\_CHANNEL\_HYSTERESIS

# Description

Specifies the Hysteresis value in volts. Hysteresis sets how far a signal must fall below the level before a rising edge can again be detected, and how far a signal must rise above the level before a falling edge can again be detected. Its function is to eliminate false events caused by signal noise. Hysteresis is specified as the voltage at the input terminals and is independent of attenuation.

### .NET Exceptions

# 4.2.10 Channel Slope

Data Type	Access	Applies to	Coercion	High Level Functions
ViInt32	R/W	Channels	None	Configure Channel Slope

# .NET Property Name

Channels[].Slope

#### .NET Enumeration Name

Slope

# COM Property Name

Channels.Item().Slope

#### COM Enumeration Name

IviCounterSlopeEnum

### C Constant Name

IVICOUNTER\_ATTR\_CHANNEL\_SLOPE

# Description

Specifies whether a rising (positive) or a falling (negative) edge triggers the counter.

### Defined Values

Name	Description		
		Language	Identifier
Positive	A positive (rising) edge passing through the trigger level triggers the counter.		
		С	IVICOUNTER_VAL_POSITIVE
		COM	IviCounterlSlopePositive
		.NET	Slope.Positive
Negative	A negative (falling) edge passing through the trigger level triggers the counter.		
	С		IVICOUNTER_VAL_NEGATIVE
		COM	IviCounterSlopeNegative
		.NET	Slope.Negative

### .NET Exceptions

### Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE and IVICOUNTER\_VAL\_SLOPE\_CLASS\_EXT\_BASE.

# 4.2.11 Channel Filter Enabled

D	ata Type	Access	Applies to	Coercion	High Level Functions
Vi	iBoolean	R/W	Channels	None	Configure Filter Enabled

# .NET Property Name

Channels[].FilterEnabled

### COM Property Name

Channels.Item().FilterEnabled

### C Constant Name

IVICOUNTER\_ATTR\_FILTER\_ENABLED

# Description

Specifies if the filter on the selected channel is enabled.

# .NET Exceptions

# 4.2.12 Frequency Channel

Da	ata Type	Access	Applies to	Coercion	High Level Functions
Vi	iString	R/W	N/A	None	Configure Frequency

# .NET Property Name

Frequency.Channel

### COM Property Name

Frequency.Channel

### C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_CHANNEL

# Description

Specifies the input channel the frequency is measured on.

# .NET Exceptions

# 4.2.13 Frequency Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Frequency

### .NET Property Name

Frequency.Estimate

### COM Property Name

Frequency.Estimate

### C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_ESTIMATE

# Description

Specifies the estimated frequency, in hertz, for the frequency function. The driver uses this to optimize the configuration of the instrument for the input signal. The driver typically use this to set the duration of the measurement.

Setting this attribute overrides the Frequency Aperture Time and sets the Frequency Estimate Auto to false.

### .NET Exceptions

# 4.2.14 Frequency Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Frequency

## .NET Property Name

Frequency.Resolution

## COM Property Name

Frequency. Resolution

## C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RESOLUTION

## Description

Specifies the resolution of the measurement, in hertz, for the frequency function.

Setting this attribute overrides the Frequency Aperture Time and sets the Frequency Resolution Auto to false.

# .NET Exceptions

# 4.2.15 Frequency Aperture Time

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Frequency With Aperture Time
PrecisionTimeSpan (.NET)				

## .NET Property Name

Frequency.ApertureTime

#### **COM Property Name**

Frequency.ApertureTime

#### C Constant Name

IVICOUNTER ATTR FREQUENCY APERTURE TIME

#### Description

Specifies the aperture time for the frequency with aperture time function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

Setting this attribute overrides the Frequency Estimate and Frequency Resolution.

This attribute can be read to determine the value of aperture time selected by the driver based on the Frequency Estimate and Frequency Resolution.

## .NET Exceptions

# 4.2.16 Frequency Estimate Auto

Data Type	Access	Applies to	Coercion	High Level Functions
ViBoolean	R/W	N/A	None	N/A

#### .NET Property Name

Frequency. EstimateAuto

#### COM Property Name

Frequency.EstimateAuto

#### C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_ESTIMATE\_AUTO

## Description

Specifies if the Counter Frequency Estimate Auto is enabled. Use the Frequency Estimate Auto attribute to enable auto frequency selection. If this attribute is set to True, the instrument automatically determines the best frequency estimate for the measurement. If this attribute is set to False, the user specifies the frequency estimate of the measurement by explicitly setting the Frequency Estimate attribute.

## .NET Exceptions

# 4.2.17 Frequency Resolution Auto

Data	a Type	Access	Applies to	Coercion	High Level Functions
ViBo	oolean	R/W	N/A	None	N/A

#### .NET Property Name

Frequency.ResolutionAuto

#### COM Property Name

Frequency.ResolutionAuto

#### C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RESOLUTION\_AUTO

## Description

Specifies if the Counter Frequency Resolution Auto is enabled. Use the Frequency Resolution Auto attribute to enable auto resolution selection. If this attribute is set to True, the instrument automatically determines the best frequency resolution for the measurement. If this attribute is set to False, the user specifies the frequency resolution of the measurement by explicitly setting the Frequency Resolution attribute.

#### .NET Exceptions

# 4.2.18 Period Channel

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViString	R/W	N/A	None	Configure Period

# .NET Property Name

Period.Channel

## COM Property Name

Period.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_PERIOD\_CHANNEL

# Description

Specifies the input channel the period is measured on.

# .NET Exceptions

## 4.2.19 Period Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Period
PrecisionTimeSpan (.NET)				

## .NET Property Name

Period.Estimate

#### **COM Property Name**

Period.Estimate

#### C Constant Name

IVICOUNTER ATTR PERIOD ESTIMATE

## Description

Specifies the estimated period for the period function. The driver uses this to optimize the configuration of the instrument for the input signal. The driver typically use this to set the duration of the measurement. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

## 4.2.20 Period Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Period
PrecisionTimeSpan (.NET)				

## .NET Property Name

Period.Resolution

#### **COM Property Name**

Period.Resolution

# C Constant Name

IVICOUNTER\_ATTR\_PERIOD\_RESOLUTION

## Description

Specifies the resolution of the measurement for the period function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

# .NET Exceptions

# 4.2.21 Period Aperture Time

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Period with Aperture
PrecisionTimeSpan (.NET)				Time

## .NET Property Name

Period.ApertureTime

#### **COM Property Name**

Period.ApertureTime

#### C Constant Name

IVICOUNTER ATTR PERIOD APERTURE TIME

#### Description

Specifies the aperture time for the period with aperture time function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

Setting this attribute overrides the Period Estimate and Period Resolution.

This attribute can be read to determine the value of aperture time selected by the driver based on the Period Estimate and Period Resolution.

## .NET Exceptions

# 4.2.22 Pulse Width Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Pulse Width

# .NET Property Name

PulseWidth.Channel

## COM Property Name

PulseWidth.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_PULSE\_WIDTH\_CHANNEL

# Description

Specifies the input channel the pulse width is measured on.

# .NET Exceptions

## 4.2.23 Pulse Width Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Pulse Width
PrecisionTimeSpan (.NET)				

#### .NET Property Name

PulseWidth.Estimate

## COM Property Name

PulseWidth.Estimate

#### C Constant Name

IVICOUNTER ATTR PULSE WIDTH ESTIMATE

## Description

Specifies the estimated pulse width for the pulse width function. The driver uses this to optimize the configuration of the instrument for the input signal. The driver typically use this to set the duration of the measurement. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

## 4.2.24 Pulse Width Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Pulse Width
PrecisionTimeSpan (.NET)				

## .NET Property Name

PulseWidth.Resolution

#### **COM Property Name**

PulseWidth.Resolution

#### C Constant Name

IVICOUNTER\_ATTR\_PULSE\_WIDTH\_RESOLUTION

## Description

Specifies the resolution of the measurement for the pulse width function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

# 4.2.25 Duty Cycle Channel

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViString	R/W	N/A	None	Configure Duty Cycle

# .NET Property Name

DutyCycle.Channel

## COM Property Name

DutyCycle.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_DUTY\_CYCLE\_CHANNEL

# Description

Specifies the input channel the duty cycle is measured on.

# .NET Exceptions

# 4.2.26 Duty Cycle Frequency Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Duty Cycle

#### .NET Property Name

DutyCycle.FrequencyEstimate

#### COM Property Name

DutyCycle.FrequencyEstimate

# C Constant Name

IVICOUNTER\_ATTR\_DUTY\_CYCLE\_FREQUENCY\_ESTIMATE

# Description

Specifies the estimated frequency, in hertz, for the duty cycle function. The driver uses this to optimize the configuration of the instrument for the input signal. The driver typically use this to set the duration of the measurement.

## .NET Exceptions

# 4.2.27 Duty Cycle Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Duty Cycle

# .NET Property Name

DutyCycle.Resolution

## COM Property Name

DutyCycle.Resolution

#### C Constant Name

IVICOUNTER\_ATTR\_DUTY\_CYCLE\_RESOLUTION

# Description

Specifies the resolution for the duty cycle function. Duty Cycle Resolution is a unitless value.

# .NET Exceptions

# 4.2.28 Edge Time Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Edge Time

# .NET Property Name

EdgeTime.Channel

## COM Property Name

EdgeTime.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_EDGE\_TIME\_CHANNEL

# Description

Specifies the input channel the edge time is measured on.

# .NET Exceptions

# 4.2.29 Edge Time Reference Type

Data Type	Access	Applies to	Coercion	High Level Functions
ViInt32	R/W	N/A	None	Configure Edge Time Reference Levels

# .NET Property Name

EdgeTime.ReferenceType

#### .NET Enumeration Name

ReferenceType

# COM Property Name

EdgeTime.ReferenceType

#### COM Enumeration Name

IviCounterEdgeTimeReferenceTypeEnum

## C Constant Name

IVICOUNTER\_ATTR\_EDGE\_TIME\_REFERENCE\_TYPE

# Description

Specifies the current reference type of the Counter. That is if the Edge Time High Reference and Edge Time Low Reference are interpretted as percentage of peak-peak or absolute volts.

#### Defined Values

Name	Description		
		Language	Identifier
Voltage	Sets the Counter to measure Edge Time based on voltage reference levels.		
	С		IVICOUNTER_VAL_VOLTAGE_REFERENCE_TYPE
	COM		IviCounterReferenceTypeVoltage
		.NET	ReferenceType.Voltage
Percent	Sets the	e Counter to mea	asure Edge Time based on percentage reference levels.
		С	IVICOUNTER_VAL_PERCENT_REFERENCE_TYPE
		COM	IviCounterReferenceTypePercent
		.NET	ReferenceType.Percent

#### .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

## **Compliance Notes**

1. If an IviCounter specific driver implements any of the defined values in the following table, it shall also implement the corresponding capability group:

Value	Required Capability Group	
Percent	IviCounterEdgeTimeReferenceLevels	

- 2. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to <code>IVICOUNTER\_VAL\_REFERENCE\_TYPE\_CLASS\_EXT\_BASE</code> and less than <code>IVICOUNTER\_VAL\_REFERENCE\_TYPE\_SPECIFIC\_EXT\_BASE</code>.
- 3. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER VAL REFERENCE TYPE SPECIFIC EXT BASE.
- 4. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER VAL REFERENCE TYPE SPECIFIC EXT BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_REFERENCE\_TYPE\_SPECIFIC\_EXT\_BASE and IVICOUNTER\_VAL\_REFERENCE\_TYPE\_CLASS\_EXT\_BASE.

# 4.2.30 Edge Time Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Edge Time
PrecisionTimeSpan (.NET)				

## .NET Property Name

EdgeTime.Estimate

#### **COM Property Name**

EdgeTime.Estimate

#### C Constant Name

IVICOUNTER\_ATTR\_EDGE\_TIME\_ESTIMATE

## Description

Specifies the estimated edge time for the edge time function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

# 4.2.31 Edge Time Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Edge Time
PrecisionTimeSpan (.NET)				

## .NET Property Name

EdgeTime.Resolution

#### **COM Property Name**

EdgeTime.Resolution

#### C Constant Name

IVICOUNTER\_ATTR\_EDGE\_TIME\_RESOLUTION

## Description

Specifies the resolution of the measurement for the edge time function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

# 4.2.32 Edge Time High Reference

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViReal64	R/W	N/A	None	N/A

## .NET Property Name

EdgeTime.HighReference

## COM Property Name

EdgeTime.HighReference

# C Constant Name

IVICOUNTER\_ATTR\_EDGE\_TIME\_HIGH\_REFERENCE

## Description

Specifies the high reference level for the edge time function. For a Rise Time measurement, this is the level where the measurement stops and for a Fall Time measurements, this is the level where the measurement starts.

## .NET Exceptions

# 4.2.33 Edge Time Low Reference

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	N/A

## .NET Property Name

EdgeTime.LowReference

## COM Property Name

EdgeTime.LowReference

# C Constant Name

IVICOUNTER\_ATTR\_EDGE\_TIME\_LOW\_REFERENCE

## Description

Specifies the low reference level for the edge time function. For a Rise Time measurement, this is the level where the measurement starts and for a Fall Time measurements, this is the level where the measurement stops.

## .NET Exceptions

# 4.2.34 Frequency Ratio Numerator Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Frequency Ratio

## .NET Property Name

FrequencyRatio.NumeratorChannel

## COM Property Name

FrequencyRatio.NumeratorChannel

# C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RATIO\_NUMERATOR\_CHANNEL

# Description

Specifies the input channel the frequency ratio is measured on.

# .NET Exceptions

# 4.2.35 Frequency Ratio Denominator Channel

Data T	ype	Access	Applies to	Coercion	High Level Functions
ViStri	ng	R/W	N/A	None	Configure Frequency Ratio

## .NET Property Name

FrequencyRatio.DenominatorChannel

## COM Property Name

FrequencyRatio.DenominatorChannel

# C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RATIO\_DENOMINATOR\_CHANNEL

## Description

Specifies the input denominator channel the frequency ratio is measured on.

# .NET Exceptions

# 4.2.36 Frequency Ratio Numerator Frequency Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Frequency Ratio

## .NET Property Name

FrequencyRatio.NumeratorFrequencyEstimate

#### COM Property Name

FrequencyRatio.NumeratorFrequencyEstimate

#### C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RATIO\_NUMERATOR\_FREQUENCY\_ESTIMATE

## Description

Specifies the estimated numerator frequency, in hertz, for the frequency ratio function. The driver uses this to optimize the configuration of the instrument for the input signal. The driver typically use this to set the duration of the measurement.

#### .NET Exceptions

# 4.2.37 Frequency Ratio Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Frequency Ratio

# .NET Property Name

FrequencyRatio.Estimate

## COM Property Name

FrequencyRatio.Estimate

#### C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RATIO\_ESTIMATE

# Description

Specifies the estimated frequency ratio for the frequency ratio function. Frequency Ratio Estimate is unitless value.

## .NET Exceptions

# 4.2.38 Frequency Ratio Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Frequency Ratio

## .NET Property Name

FrequencyRatio.Resolution

## COM Property Name

FrequencyRatio.Resolution

# C Constant Name

IVICOUNTER\_ATTR\_FREQUENCY\_RATIO\_RESOLUTION

# Description

Specifies the frequency ratio resolution of the frequency ratio function. Frequency Ratio Resolution is unitless value.

## .NET Exceptions

## 4.2.39 Time Interval Start Channel

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViString	R/W	N/A	None	Configure Time Interval

# .NET Property Name

TimeInterval.StartChannel

## COM Property Name

TimeInterval.StartChannel

#### C Constant Name

IVICOUNTER\_ATTR\_TIME\_INTERVAL\_START\_CHANNEL

# Description

Specifies the start channel used to perform the time interval function.

# .NET Exceptions

# 4.2.40 Time Interval Stop Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Time Interval

## .NET Property Name

TimeInterval.StopChannel

## COM Property Name

TimeInterval.StopChannel

#### C Constant Name

IVICOUNTER\_ATTR\_TIME\_INTERVAL\_STOP\_CHANNEL

# Description

Specifies the stop channel used to perform the time interval function.

# .NET Exceptions

## 4.2.41 Time Interval Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Time Interval
PrecisionTimeSpan (.NET)				

## .NET Property Name

TimeInterval.Estimate

## COM Property Name

TimeInterval.Estimate

#### C Constant Name

IVICOUNTER\_ATTR\_TIME\_INTERVAL\_ESTIMATE

## Description

Specifies the estimated time interval for the time interval function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

## 4.2.42 Time Interval Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Time Interval
PrecisionTimeSpan (.NET)				

## .NET Property Name

TimeInterval.Resolution

#### **COM Property Name**

TimeInterval.Resolution

#### C Constant Name

IVICOUNTER\_ATTR\_TIME\_INTERVAL\_RESOLUTION

# Description

Specifies the resolution of the measurement for the time interval function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

# 4.2.43 Phase Input Channel

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViString	R/W	N/A	None	Configure Phase

# .NET Property Name

Phase.InputChannel

## COM Property Name

Phase.InputChannel

#### C Constant Name

IVICOUNTER\_ATTR\_PHASE\_INPUT\_CHANNEL

# Description

Specifies the input channel the phase is measured on.

# .NET Exceptions

## 4.2.44 Phase Reference Channel

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViString	R/W	N/A	None	Configure Phase

# .NET Property Name

Phase.ReferenceChannel

## COM Property Name

Phase.ReferenceChannel

#### C Constant Name

IVICOUNTER\_ATTR\_PHASE\_REFERENCE\_CHANNEL

# Description

Specifies the reference channel for the phase measurement.

# .NET Exceptions

# 4.2.45 Phase Frequency Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Phase

## .NET Property Name

Phase.FrequencyEstimate

#### COM Property Name

Phase.FrequencyEstimate

#### C Constant Name

IVICOUNTER\_ATTR\_PHASE\_FREQUENCY\_ESTIMATE

# Description

Specifies the estimated frequency, in hertz, for the phase function reference channel. The driver uses this to optimize the configuration of the instrument for the input signal. The driver typically use this to set the duration of the measurement.

## .NET Exceptions

# 4.2.46 Phase Resolution

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Phase

# .NET Property Name

Phase.Resolution

## COM Property Name

Phase.Resolution

#### C Constant Name

IVICOUNTER\_ATTR\_PHASE\_RESOLUTION

# Description

Specifies the resolution of the measurement, in degrees, for the phase function reference channel.

# .NET Exceptions

# 4.2.47 Continuous Totalize Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Continuous Totalize

# .NET Property Name

TotalizeContinuous.Channel

## COM Property Name

TotalizeContinuous.Channel

# C Constant Name

IVICOUNTER\_ATTR\_CONTINUOUS\_TOTALIZE\_CHANNEL

# Description

Specifies the input channel for the continuous totalize function.

# .NET Exceptions

# 4.2.48 Gated Totalize Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Gated Totalize

# .NET Property Name

TotalizeGated.Channel

## COM Property Name

TotalizeGated.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_GATED\_TOTALIZE\_CHANNEL

# Description

Specifies the input channel for the gated totalize function.

# .NET Exceptions

## 4.2.49 Gated Totalize Gate Source

Data Ty	pe	Access	Applies to	Coercion	High Level Functions	
ViStri	ViString R		N/A	None	Configure Gated Totalize	

#### .NET Property Name

TotalizeGated.GateSource

#### **COM Property Name**

TotalizeGated.GateSource

# C Constant Name

IVICOUNTER\_ATTR\_GATED\_TOTALIZE\_GATE\_SOURCE

## Description

Specifies the gate source for the gated totalize function.

## Defined Values

The value can be a channel name alias, a driver-specific channel string, or one of the values from IVI-3.3. *Standard Cross-Class Capabilities Specification*.

## .NET Exceptions

# 4.2.50 Gated Totalize Gate Slope

]	Data Type	Access	Applies to	Coercion	High Level Functions	
	ViInt32	R/W	N/A	None	Configure Gated Totalize	

# .NET Property Name

TotalizeGated.GateSlope

#### .NET Enumeration Name

Slope

# COM Property Name

TotalizeGated.GateSlope

#### COM Enumeration Name

IviCounterSlopeEnum

## C Constant Name

IVICOUNTER\_ATTR\_GATED\_TOTALIZE\_GATE\_SLOPE

# Description

Specifies the gate slope that enables the gated totalize function.

# Defined Values

Name	Descrip	Description			
		Language	Identifier		
Positive	A posit	ive (rising) edge	passing through the trigger level enables the gate.		
	С		IVICOUNTER_VAL_POSITIVE		
		COM	IviCounterSlopePositive		
		.NET	Slope.Positive		
Negative	A negat	tive (falling) edg	ge passing through the trigger level enables the gate.		
		С	IVICOUNTER_VAL_NEGATIVE		
		COM	IviCounterSlopeNegative		
		.NET	Slope.Negative		

## .NET Exceptions

## Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER VAL SLOPE SPECIFIC EXT BASE and IVICOUNTER VAL SLOPE CLASS EXT BASE.

# 4.2.51 Timed Totalize Channel

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure Timed Totalize

# .NET Property Name

TotalizeTimed.Channel

## COM Property Name

TotalizeTimed.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_TIMED\_TOTALIZE\_CHANNEL

# Description

Specifies the input channel for the timed totalize function.

# .NET Exceptions

## 4.2.52 Timed Totalize Gate Time

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure Timed Totalize
PrecisionTimeSpan (.NET)				

## .NET Property Name

TotalizeTimed.GateTime

## COM Property Name

TotalizeTimed.GateTime

#### C Constant Name

IVICOUNTER ATTR TIMED TOTALIZE GATE TIME

# Description

Specifies the gate time for the timed totalize function. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

# 4.2.53 Start Arm Type

Dat	ta Type	Access	Applies to	Coercion	High Level Functions	
ViInt32 R/		R/W	N/A	None	Configure Start Arm	

# .NET Property Name

Arm.Start.Type

#### .NET Enumeration Name

ArmType

# COM Property Name

Arm.Start.Type

#### COM Enumeration Name

IviCounterArmTypeEnum

## C Constant Name

IVICOUNTER\_ATTR\_START\_ARM\_TYPE

## Description

Specifies the start arm type for armed measurements.

## Defined Values

Name	Description				
		Language	Identifier		
Immediate	Immedi	iately proceed w	rith the measurement without waiting for an arm event		
		С	IVICOUNTER_VAL_IMMEDIATE_ARM_TYPE		
	CO		IviCounterArmImmediate		
		.NET	ArmType.Immediate		
External	Wait fo		tart Arm Source event before proceeding with the		
С		С	IVICOUNTER_VAL_EXTERNAL_ARM_TYPE		
	COM		IviCounterArmExternal		
		.NET	ArmType.External		

# .NET Exceptions

## Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_START\_ARM\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_START\_ARM\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_START\_ARM\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_START\_ARM\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_START\_ARM\_SPECIFIC\_EXT\_BASE and IVICOUNTER VAL START ARM CLASS EXT BASE.

## 4.2.54 External Start Arm Source

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure External Start Arm

#### .NET Property Name

Arm.Start.External.Source

#### **COM Property Name**

Arm.Start.External.Source

# C Constant Name

IVICOUNTER\_ATTR\_EXTERNAL\_START\_ARM\_SOURCE

## Description

Specifies the start arm source for external armed measurements.

## Defined Values

The value can be a channel name alias, a driver-specific channel string, or one of the values from IVI-3.3. *Standard Cross-Class Capabilities Specification*.

## .NET Exceptions

# 4.2.55 External Start Arm Level

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViReal64	R/W	N/A	None	Configure External Start Arm

# .NET Property Name

Arm.Start.External.Level

## COM Property Name

Arm.Start.External.Level

#### C Constant Name

IVICOUNTER\_ATTR\_EXTERNAL\_START\_ARM\_LEVEL

# Description

Specifies the voltage level in volts that starts external armed measurements.

# .NET Exceptions

# 4.2.56 External Start Arm Slope

Data Type	Access	Access Applies to		High Level Functions	
ViInt32	R/W	N/A	None	Configure External Start Arm	

## .NET Property Name

Arm.Start.External.Slope

#### .NET Enumeration Name

Slope

# COM Property Name

Arm.Start.External.Slope

#### COM Enumeration Name

IviCounterSlopeEnum

## C Constant Name

IVICOUNTER\_ATTR\_EXTERNAL\_START\_ARM\_SLOPE

## Description

Specifies the signal slope that starts external armed measurements.

#### Defined Values

Name	Description				
		Language	Identifier		
Positive	A positive (rising) edge passing through the trigger level triggers the gate.				
	С		IVICOUNTER_VAL_POSITIVE		
	COM		IviCounterSlopePositive		
		.NET	Slope.Positive		
Negative	A negative (falling) edge passing through the trigger level triggers the gate.				
	С		IVICOUNTER_VAL_NEGATIVE		
		COM	IviCounterSlopeNegative		
		.NET	Slope.Negative		

## .NET Exceptions

## Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE and IVICOUNTER\_VAL\_SLOPE\_CLASS\_EXT\_BASE.

# 4.2.57 External Start Arm Delay

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure External Start Arm
PrecisionTimeSpan (.NET)				

## .NET Property Name

Arm.Start.External.Delay

#### **COM Property Name**

Arm.Start.External.Delay

#### C Constant Name

IVICOUNTER ATTR EXTERNAL START ARM DELAY

## Description

Specifies the delay used after an external armed measurement has been armed. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

## Compliance Notes

1. Positive values only.

# 4.2.58 Stop Arm Type

I	Data Type	Access	Applies to	Coercion	High Level Functions
	ViInt32	R/W	N/A	None	Configure Stop Arm

# .NET Property Name

Arm.Stop.Type

#### .NET Enumeration Name

ArmType

# COM Property Name

Arm.Stop.Type

#### COM Enumeration Name

IviCounterArmTypeEnum

## C Constant Name

IVICOUNTER\_ATTR\_STOP\_ARM\_TYPE

# Description

Specifies the stop arm type for armed measurements.

#### Defined Values

Name	Description		
		Language	Identifier
Immediate	Immediately end the measurement without waiting for an arm event		
	С		IVICOUNTER_VAL_IMMEDIATE_ARM_TYPE
		COM	IviCounterArmImmediate
		.NET	ArmType.Immediate
External	Wait for the External Stop Arm Source event before proceeding with the External Stop Arm Delay		
	С		IVICOUNTER_VAL_EXTERNAL_ARM_TYPE
		COM	IviCounterArmExternal
		.NET	ArmType.External

# .NET Exceptions

#### Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_STOP\_ARM\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_STOP\_ARM\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_STOP\_ARM\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_STOP\_ARM\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER\_VAL\_STOP\_ARM\_SPECIFIC\_EXT\_BASE and IVICOUNTER\_VAL\_STOP\_ARM\_CLASS\_EXT\_BASE.

# 4.2.59 External Stop Arm Source

Data Type	Access	Applies to	Coercion	High Level Functions
ViString	R/W	N/A	None	Configure External Stop Arm

#### .NET Property Name

Arm.Stop.External.Source

## COM Property Name

Arm.Stop.External.Source

## C Constant Name

IVICOUNTER\_ATTR\_EXTERNAL\_STOP\_ARM\_SOURCE

## Description

Specifies the stop arm source for external armed measurements.

## Defined Values

The value can be a channel name alias, a driver-specific channel string, or one of the values from IVI-3.3. *Standard Cross-Class Capabilities Specification*.

# .NET Exceptions

# 4.2.60 External Stop Arm Level

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViReal64	R/W	N/A	None	Configure External Stop Arm

## .NET Property Name

Arm.Stop.External.Level

## COM Property Name

Arm.Stop.External.Level

# C Constant Name

IVICOUNTER\_ATTR\_EXTERNAL\_STOP\_ARM\_LEVEL

## Description

Specifies the voltage level in volts that stops external armed measurements. The External Stop Arm Delay, if non-zero, is applied before the measurement stops.

## .NET Exceptions

# 4.2.61 External Stop Arm Slope

Data Type	Access	Applies to	Coercion	High Level Functions
ViInt32	R/W	N/A	None	Configure External Stop Arm

# .NET Property Name

Arm.Stop.External.Slope

#### .NET Enumeration Name

Slope

# COM Property Name

Arm.Stop.External.Slope

#### COM Enumeration Name

IviCounterSlopeEnum

## C Constant Name

IVICOUNTER\_ATTR\_EXTERNAL\_STOP\_ARM\_SLOPE

# Description

Specifies the signal slope that stops external armed measurements. The External Stop Arm Delay, if non-zero, is applied before the measurements stops.

#### Defined Values

Name	Description			
		Language	Identifier	
Positive	A positive (rising) edge passing through the trigger level triggers the gate.			
	С		IVICOUNTER_VAL_POSITIVE	
		COM	IviCounterSlopePositive	
		.NET	Slope.Positive	
Negative	A negative (falling) edge passing through the trigger level triggers the gate.			
	С		IVICOUNTER_VAL_NEGATIVE	
		COM	IviCounterSlopeNegative	
		.NET	Slope.Negative	

#### .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

#### Compliance Notes

- 1. If an IVI-C class driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_CLASS\_EXT\_BASE and less than IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 2. If an IVI-C specific driver defines additional values for this attribute, the actual values shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.
- 3. If an IVI-COM specific driver implements this attribute with additional elements in its instrument specific interfaces, the actual values of the additional elements shall be greater than or equal to IVICOUNTER\_VAL\_SLOPE\_SPECIFIC\_EXT\_BASE.

See Section 10, *IviCounter Attribute Value Definitions*, for the definitions of IVICOUNTER VAL SLOPE SPECIFIC EXT BASE and IVICOUNTER VAL SLOPE CLASS EXT BASE.

# 4.2.62 External Stop Arm Delay

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	None	Configure External Stop Arm
PrecisionTimeSpan (.NET)				

## .NET Property Name

Arm.Stop.External.Delay

#### **COM Property Name**

Arm.Stop.External.Delay

#### C Constant Name

IVICOUNTER ATTR EXTERNAL STOP ARM DELAY

## Description

Specifies the delay after the External Arm Stop event has occurred until the measurement stops. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

## .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

## Compliance Notes

1. Positive values only.

#### 4.3 IviCounterBase Functions

The IviCounterBase capability group defines the following functions:

- Abort
- Is Measurement Complete
- Configure Channel
- Configure Level
- Configure Slope (IVI-C Only)
- Configure Filter Enabled (IVI-C Only)
- Configure Frequency
- Configure Frequency Manual
- Configure Frequency With Aperture Time
- Configure Period
- Configure Period With Aperture Time
- Configure Pulse Width
- Configure Duty Cycle
- Configure Edge Time
- Configure Edge Time Reference Levels
- Configure Frequency Ratio
- Configure Time Interval
- Configure Phase
- Configure Continuous Totalize
- Start Continuous Totalize
- Stop Continuous Totalize
- Fetch Continuous Totalize Count
- Configure Gated Totalize
- Configure Timed Totalize
- Configure Start Arm (IVI-C Only)
- Configure External Start Arm
- Configure Stop Arm (IVI-C Only)

- Configure External Stop Arm
- Fetch
- Initiate
- Read

This section describes the behavior and requirements of each function.

## 4.3.1 Abort

## Description

Aborts a previously initiated measurement.

# .NET Method Prototype

```
void Measurement.Abort ();
```

## COM Method Prototype

```
HRESULT Measurement.Abort ();
```

## C Function Prototype

ViStatus IviCounter Abort (ViSession Vi);

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

# 4.3.2 Is Measurement Complete

## Description

Returns whether a measurement is in progress, complete, or if the status is unknown.

## .NET Method Prototype

MeasurementStatus Measurement.GetMeasurementComplete ();

## COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession

Outputs	Description	Base Type
MeasurementStatus	Returns the measurement status.	ViInt32

#### Defined Values for Status Parameter

Name	Description			
		Language	Identifier	
Measurement Complete	The	e counter timer has completed the measurement.		
		С	IVICOUNTER_VAL_MEASUREMENT_COMPLETE	
		COM	IviCounterMeasurementStatusComplete	
		.NET	MeasurementStatus.Complete	
Measurement In Progress	Th	e counter time	nter timer is still acquiring data.	
		С	IVICOUNTER_VAL_MEASUREMENT_IN_PROGRESS	
		COM	IviCounterMeasurementStatusInProgress	
	.NET		MeasurementStatus.InProgress	
Measurement Status Unknown	The counter time		er cannot determine the status of the measurement.	
		С	IVICOUNTER_VAL_MEASUREMENT_STATUS_UNKNOWN	
		COM	IviCounterMeasurementStatusUnknown	

.NET MeasurementStatus.Unknown
--------------------------------

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## Compliance Notes

1. If an IVI specific driver defines additional values for this parameter, the actual values shall be greater than or equal to IviCounter Specific Driver Value Extension Base. See Section 10, *IviCounter Attribute Value Definitions* for more information.

## .NET Exceptions

# 4.3.3 Get Channel Name (IVI-C Only)

## Description

This function returns the physical channel identifier that corresponds to the one-based index that the user specifies. If the value that the user passes for the ChannelIndex parameter is less than one or greater than the value of the Channel Count attribute, the function returns an empty string in the ChannelName parameter and returns an error.

# .NET Method Prototype

```
N/A (Use the Channels[].Name property)
```

#### COM Method Prototype

```
N/A (Use the Channels.Name property)
```

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
ChannelIndex	A one-based index that defines which name to return.	ViInt32
ChannelName BufferSize	The number of bytes in the ViChar array that the user specifies for the ChannelName parameter.	ViInt32

Outputs	Description	Base Type
ChannelName	The buffer into which the function returns the channel name that corresponds to the index the user specifies.	ViChar[]
	The caller may pass VI_NULL for this parameter if the	
	ChannelNameBufferSize parameter is $0$ .	

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

# 4.3.4 Configure Channel

## Description

Configures the Impedance, Coupling, and Attenuation attributes of the counter channel.

## .NET Method Prototype

## COM Method Prototype

#### C Function Prototype

#### **Parameters**

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel you want to configure.	ViConstString
Impedance	Specifies the impedance you want the Counter to use to couple the input signal for the channel. The driver sets the Channel Impedance attribute to this value. See the attribute description for more information.	ViReal64
Coupling	Specifies how you want the Counter to couple the input signal for the channel. The driver sets the Channel Coupling attribute to this value. See the attribute description for more information.	ViInt32
Attenuation	Specifies the attenuation you want the Counter to use for the channel. The driver sets the Channel Attenuation attribute to this value. See the attribute description for more information.	ViReal64

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

# .NET Exceptions

# 4.3.5 Configure Level

## Description

Configures the Level and Hysteresis attributes for a channel.

## .NET Method Prototype

#### COM Method Prototype

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel you want to configure.	ViConstString
TriggerLevel	Specifies the Trigger Level you want the Counter to use for the channel. The driver sets the Channel Level attribute to this value. See the attribute description for more information.	ViReal64
Hysteresis	Specifies the Hysteresis you want the Counter to use for the channel. The driver sets the Channel Hysteresis attribute to this value. See the attribute description for more information.	ViReal64

#### Return Values

The IVI-3.2: Inherent Capabilities Specification defines general status codes that this function can return.

#### Compliance Notes

- 1. Trigger Level is specified as voltage at the input terminals that is independent of instrument attenuation.
- 2. Hysteresis is specified as voltage at the input terminals that is independent of instrument attenuation.

# .NET Exceptions

# 4.3.6 Configure Slope (IVI-C Only)

## Description

Configures the Slope attribute for a channel.

# .NET Method Prototype

```
N/A (Use the Channels[].Slope property)
```

## COM Method Prototype

```
N/A (use the Channels.Item().Slope property)
```

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel you want to configure.	ViConstString
Slope	Specifies the Slope you want the Counter to use for the channel. The driver sets the Channel Slope attribute to this value. See the attribute description for more information.	ViInt32

## Return Values

The IVI-3.2: Inherent Capabilities Specification defines general status codes that this function can return.

# 4.3.7 Configure Filter Enabled (IVI-C Only)

## Description

Configures the Filter Enabled attribute for a channel.

## .NET Method Prototype

N/A

(Use the Channels[].FilterEnabled property)

## COM Method Prototype

N/A

(use the Channels.Item().FilterEnabled property)

## C Function Prototype

## Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel you want to configure.	ViConstString
FilterEnabled	Specifies if you want the Counter Filter Enabled for the channel. The driver sets the Channel Filter Enabled attribute to this value. See the attribute description for more information.	ViBoolean

#### Return Values

The IVI-3.2: Inherent Capabilities Specification defines general status codes that this function can return.

# 4.3.8 Configure Frequency

#### Description

These functions provide both manual and auto frequency configuration. The Configure Manual function configures the Estimate and Resolution attributes for a frequency measurement for a particular channel. The Configure function configures the instrument to determine the best estimate and resolution for the selected channel.

The Configure function sets Frequency Estimate Auto and Frequency Resolution Auto true. When the Frequency Estimate Auto or Frequency Resolution Auto are true, the Aperture Time attribute can be read to determine the Aperture Time selected by the driver.

The default conditions for automatic measurements are:

Mode: Frequency

Trigger Level: Auto

Trigger Slope: Positive

• Impedance: 1 MOhm

• Attenuation: 1X

Coupling: AC

Filter: Off

#### .NET Method Prototype

#### COM Method Prototype

#### C Function Prototype

```
ViStatus IviCounter_ConfigureFrequency (ViSession Vi,
ViConstString Channel);

ViStatus IviCounter_ConfigureFrequencyManual (ViSession Vi,
ViConstString Channel,
ViReal64 Estimate,
ViReal64 Resolution);
```

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the frequency will be measured on. The driver sets the Frequency Channel attribute to this value.	ViConstString
Estimate	Specifies the estimated frequency. The driver sets the Frequency Estimate attribute to this value. See the attribute description for more information.	ViReal64
Resolution	Specifies the resolution of the frequency measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Frequency Resolution attribute to this value. See the attribute description for more information.	ViReal64

## Return Values

The IVI-3.2: Inherent Capabilities Specification defines general status codes that this function can return.

# .NET Exceptions

# 4.3.9 Configure Frequency With Aperture Time

## Description

Configures a frequency measurement based on the specified aperture time.

## .NET Method Prototype

## COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the frequency will be measured on. The driver sets the Frequency Channel attribute to this value.	ViConstString
ApertureTime	Specifies the aperture time of the frequency measurement. The driver sets the Frequency Aperture Time to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

#### Return Values

The IVI-3.2: Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

# 4.3.10 Configure Period

## Description

Configures the estimate and resolution attributes for a period measurement.

## .NET Method Prototype

#### COM Method Prototype

# C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the period will be measured on. The driver sets the Period Channel attribute to this value.	ViConstString
Estimate	Specifies the estimated period. The driver sets the Period Estimate attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)
Resolution	Specifies the resolution of the period measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Period Resolution attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

# 4.3.11 Configure Period With Aperture Time

## Description

Configures a period measurement based on the specified aperture time.

## .NET Method Prototype

#### COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the period will be measured on. The driver sets the Period Channel attribute to this value.	ViConstString
ApertureTime	Specifies the aperture time of the period measurement. The driver sets the Period Aperture Time attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

#### Return Values

The IVI-3.2: Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

## 4.3.12 Configure Pulse Width

## Description

Configures the estimate and resolution attributes for a pulse width measurement.

## .NET Method Prototype

#### COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the pulse width will be measured on. The driver sets the Pulse Width Channel attribute to this value.	ViConstString
Estimate	Specifies the estimated pulse width. The driver sets the Pulse Width Estimate attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)
Resolution	Specifies the resolution of the pulse width measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Pulse Width Resolution attribute this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

## 4.3.13 Configure Duty Cycle

## Description

Configures the frequency estimate and resolution attributes for a duty cycle measurement.

## .NET Method Prototype

#### COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the duty cycle will be measured on. The driver sets the Duty Cycle Frequency Channel attribute to this value.	ViConstString
FrequencyEstimate	Specifies the estimated frequency. The driver sets the Duty Cycle Frequency Estimate attribute to this value. See the attribute description for more information.	ViReal64
Resolution	Specifies the resolution of the duty cycle measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets Duty Cycle Resolution attribute to this value. See the attribute description for more information.	ViReal64

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

## 4.3.14 Configure Edge Time

## Description

Configures an edge time measurement. The estimate and resolution attributes are set to the values specified. The edge time reference type is set to percentage, and the edge time low reference and edge time high reference are set to 10% and 90% respectively. If the channel slope is positive a rise-time measurement is performed, if the channel slope is negative, a fall-time measurement is performed.

#### .NET Method Prototype

## COM Method Prototype

```
HRESULT EdgeTime.Configure ([in] BSTR Channel,
[in] DOUBLE Estimate,
[in] DOUBLE Resolution);
```

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the edge time will be measured on. The driver sets the Edge Time Channel attribute to this value.	ViConstString
Estimate	Specifies the estimated edge time. The driver sets the Edge Time Estimate attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)
Resolution	Specifies the resolution of the edge time measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Edge Time Resolution attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

## 4.3.15 Configure Edge Time Reference Levels

## Description

Configures the reference type, estimate, resolution, high reference level, and low reference level attributes for an edge time measurement. If the channel slope is positive a rise-time measurement is performed, if the channel slope is negative, a fall-time measurement is performed.

#### .NET Method Prototype

#### COM Method Prototype

```
HRESULT EdgeTime.ConfigureReferenceLevels ([in] BSTR Channel,

[in] IviCounterEdgeTimeReferenceTypeEnum ReferenceType,

[in] DOUBLE Estimate,

[in] DOUBLE Resolution,

[in] DOUBLE HighReference,

[in] DOUBLE LowReference);
```

#### C Function Prototype

```
ViStatus IviCounter_ConfigureEdgeTimeReferenceLevels (ViSession Vi,
ViConstString Channel,
ViInt32 ReferenceType,
ViReal64 Estimate,
ViReal64 Resolution);
ViReal64 HighReference,
ViReal64 LowReference);
```

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the edge time will be measured on. The driver sets the Edge Time Channel attribute to this value.	ViConstString
ReferenceType	Specifies the reference type. The driver sets the Reference Type attribute to this value. See the attribute description for more information.	ViInt32
Estimate	Specifies the estimated edge time. The driver sets the Edge Time Estimate attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

Resolution	Specifies the resolution of the edge time measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Edge Time Resolution attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)
HighReference	Specifies the high reference level for the edge time. The driver sets the Edge Time High Reference attribute to this value. See the attribute description for more information.	ViReal64
LowReference	Specifies the low reference level for the edge time. The driver sets the Edge Time Low Reference attribute to this value. See the attribute description for more information.	ViReal64

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

# .NET Exceptions

## 4.3.16 Configure Frequency Ratio

## Description

Configures the estimated frequencies, and resolution attributes and specifies the numerator and denominator channels for a frequency ratio measurement.

#### .NET Method Prototype

## COM Method Prototype

#### C Function Prototype

```
ViStatus IviCounter_ConfigureFrequencyRatio

(ViSession Vi,
ViConstString NumeratorChannel,
ViConstString DenominatorChannel,
ViReal64 NumeratorFrequencyEstimate,
ViReal64 Estimate,
ViReal64 Resolution);
```

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
NumeratorChannel	Specifies the numerator channel the frequency ratio will be measured on. The driver sets the Frequency Ratio Numerator Channel attribute to this value.	ViConstString
DenominatorChannel	Specifies the denominator channel the frequency ratio will be measured on. The driver sets the Frequency Ratio Denominator Channel attribute to this value.	ViConstString
NumeratorFrequencyEstimate	Specifies the estimated frequency for the numerator of the frequency ratio. The driver sets the Frequency Ratio Numerator Frequency Estimate attribute to this value. See the attribute description for more information.	ViReal64

Estimate	Specifies the estimated frequency ratio measurement. The driver sets the Frequency Ratio Estimate attribute to this value.	ViReal64
Resolution	Specifies the resolution of the frequency ratio measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Frequency Ratio Resolution attribute to this value. See the attribute description for more information.	ViReal64

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

## 4.3.17 Configure Time Interval

## Description

Configures the estimate and resolution attributes and specifies the start and stop channels for a time interval measurement.

#### .NET Method Prototype

#### COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
StartChannel	Specifies the channel that will start the time interval measurement. The driver sets the Time Interval Start Channel attribute to this value.	ViConstString
StopChannel	Specifies the channel that will stop the time interval measurement. The driver sets the Time Interval Stop Channel attribute to this value.	ViConstString
Estimate	Specifies the estimated time interval. The driver sets the Time Interval Estimate attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)
Resolution	Specifies the resolution of the time interval measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Time Interval Resolution attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

## Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

## 4.3.18 Configure Phase

## Description

Configures the estimate and resolution attributes and specifies the input and reference channels for a phase measurement.

#### .NET Method Prototype

#### COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
InputChannel	Specifies the input channel the phase will be measured on. The driver sets the Phase Input Channel attribute to this value.	ViConstString
ReferenceChannel	Specifies the channel the phase measurement will be referenced to. The driver sets the Phase Reference Channel attribute to this value.	ViConstString
FrequencyEstimate	Specifies the estimated phase. The driver sets the Phase Frequency Estimate attribute to this value. See the attribute description for more information.	ViReal64
Resolution	Specifies the resolution of the phase measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Phase Frequency Resolution attribute to this value. See the attribute description for more information.	ViReal64

## Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

## 4.3.19 Configure Continuous Totalize

## Description

Configures the counter for a continuous totalize measurement. Start continuous totalize clears the count and starts the accumulation of counts. Stop continuous totalize stops the accumulation of counts. Fetch continuous totalize can be called if the count is accumulating or stopped to retrieve the current count.

#### .NET Method Prototype

```
void TotalizeContinuous.Configure (String channel);
```

#### COM Method Prototype

```
HRESULT TotalizeContinuous.Configure ([in] BSTR Channel);
```

#### C Function Prototype

#### **Parameters**

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the input channel The driver sets the Totalize Channel attribute to this value.	ViConstString

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

## 4.3.20 Start Continuous Totalize

## Description

Clears the count and starts the counter for a continuous totalize measurement. Refer to Section 4.3.19, *Configure Continuous Totalize* for details.

## .NET Method Prototype

```
void TotalizeContinuous.Start ();
```

## COM Method Prototype

```
HRESULT TotalizeContinuous.Start ();
```

## C Function Prototype

ViStatus IviCounter StartContinuousTotalize (ViSession Vi);

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

# 4.3.21 Stop Continuous Totalize

## Description

Stops the accumulation of counts for a continuous totalize measurement. Refer to Section 4.3.19, *Configure Continuous Totalize* for details.

## .NET Method Prototype

```
void TotalizeContinuous.Stop ();
```

## COM Method Prototype

HRESULT TotalizeContinuous.Stop ();

## C Function Prototype

ViStatus IviCounter StopContinuousTotalize (ViSession Vi);

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

## 4.3.22 Fetch Continuous Totalize Count

## Description

Retrieves the current count while the counter is continuously totalizing. Refer to Section 4.3.19, *Configure Continuous Totalize* for details.

#### .NET Method Prototype

```
Int32 TotalizeContinuous.FetchCount ();
```

## COM Method Prototype

```
HRESULT TotalizeContinuous.FetchCount ([out, retval] LONG* Measurement);
```

#### C Function Prototype

#### Parameters

Inputs	Description	Datatype
Vi	Instrument handle	ViSession

Outputs	Description	Datatype
Measurement	Returns the measured value.	ViInt32

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

## 4.3.23 Configure Gated Totalize

#### Description

Specifies the channel to use for the gate source and configures the gate slope attribute for a gated totalize measurement.

#### .NET Method Prototype

#### COM Method Prototype

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel that will be counted. The driver sets Gated Totalize Channel attribute to this value.	ViConstString
GateSource	Specifies the channel that will gate the counted channel. The driver sets Gated Totalize Gate Source attribute to this value. See the attribute description for more information.	ViConstString
GateSlope	Specifies the gate slope you want to configure. The driver sets the Gated Totalize Gate Slope attribute to this value. See the attribute description for more information.	ViInt32

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

# 4.3.24 Configure Timed Totalize

## Description

Sets the measurement function to Timed Totalize and configures the gate time attribute.

## .NET Method Prototype

#### COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel that will be counted. The driver sets the Gated Totalize Channel attribute to this value.	ViConstString
GateTime	Specifies the gate time that will gate the counter channel. The driver sets the Gated Totalize Gate Time attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

# 4.3.25 Configure Start Arm (IVI-C Only)

# Description

Configures the Start Arm for armed measurements.

## .NET Method Prototype

```
N/A (use the Arm.Start.Type property)
```

## COM Method Prototype

```
\ensuremath{\text{N/A}} (use the Arm.Start.Type property)
```

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Unique identifier for an IVI session	ViSession
Туре	Specifies the Start Arm type for armed measurements. The driver sets the Start Arm Type attribute to this value. See the attribute description for more information.	ViInt32

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## 4.3.26 Configure External Start Arm

## Description

Specifies the External Start Arm Source and configures the Level, Slope and Delay attributes.

## .NET Method Prototype

## COM Method Prototype

```
HRESULT Arm.Start.External.Configure

([in] BSTR Source,
[in] DOUBLE Level,
[in] IviCounterSlopeEnum Slope,
[in] DOUBLE Delay);
```

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Unique identifier for an IVI session	ViSession
Source	Specifies the External Start Arm source for armed measurements. The driver sets the External Start Arm Source attribute to this value.	ViConstString
Level	Specifies the Level you want the Counter to use for the External Start Arm. The driver sets the External Start Arm Level attribute to this value. See the attribute description for more information.	ViReal64
Slope	Specifies the External Start Arm slope. The driver sets the External Start Arm Slope attribute to this value. See the attribute description for more information.	ViInt32
Delay	Specifies the External Start Arm Delay. The driver sets the External Start Arm Delay attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

## Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

# 4.3.27 Configure Stop Arm (IVI-C Only)

## Description

Configures the Stop Arm for armed measurements.

## .NET Method Prototype

```
N/A (use the Arm.Stop.Type property)
```

## COM Method Prototype

```
{\rm N/A} (use the Arm.Stop.Type property)
```

## C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Unique identifier for an IVI session	ViSession
Туре	Specifies the Stop Arm type for armed measurements. The driver sets the Stop Arm attribute to this value. See the attribute description for more information.	ViInt32

## Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## 4.3.28 Configure External Stop Arm

## Description

Specifies the External Stop Arm Source and configures the Level, Slope and Delay attributes.

## .NET Method Prototype

## COM Method Prototype

```
HRESULT Arm.Stop.External.Configure

([in] BSTR Source,
[in] DOUBLE Level,
[in] IviCounterSlopeEnum Slope,
[in] DOUBLE Delay);
```

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Unique identifier for an IVI session	ViSession
Source	Specifies the External Stop Arm source for armed measurements. The driver sets the External Stop Arm Source attribute to this value.	
Level	Specifies the Level you want the Counter to use for the External Stop Arm. The driver sets the External Stop Arm Level attribute to this value. See the attribute description for more information.	ViReal64
Slope	Specifies the External Stop Arm slope. The driver sets the External Stop Arm Slope attribute to this value. See the attribute description for more information.	ViInt32
Delay	Specifies the External Stop Arm Delay. The driver sets the External Stop Arm Delay attribute to this value. See the attribute description for more information.	ViReal64 (C/COM) PrecisionTimeSpan (.NET)

## Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

## .NET Exceptions

#### 4.3.29 Fetch

#### Description

Retrieves the result from a previously initiated measurement.

Use the Initiate function to start a measurement. The Is Measurement Complete function may be used to determine when the measurement is complete.

You can call the Read function instead of the Initiate function. The Read function starts a measurement. It then waits for the measurement to complete, obtains the measured value, and returns the measured value. You call this function separately for any other measurements that you want to obtain on a specific channel.

This function does not check the instrument status. Typically, you call this function only in a sequence of calls to other low-level driver functions. The sequence performs one operation. You use the low-level functions to optimize one or more aspects of interaction with the instrument. If you want to check the instrument status, call the Error Query function at the conclusion of the sequence.

#### .NET Method Prototype

```
Double Measurement.Fetch ();
```

#### COM Method Prototype

```
HRESULT Measurement.Fetch ([out, retval] DOUBLE* Measurement);
```

#### C Function Prototype

#### Parameters

Inputs	Description	Datatype
Vi	Instrument handle	ViSession

Outputs	Description	Datatype
Measurement	Returns the measured value.	ViReal64

#### **Return Values**

The *IVI-3.2: Inherent Capabilities Specification* defines general status codes that this function can return. The table below specifies additional class-defined status codes for this function.

<b>Completion Code</b>	Description
Over Range	Measurement is over range.

#### .NET Exceptions

## Units

Units: The units depend on the Measurement Function you select as shown below.

Measurement Function	Units
Frequency	Hertz
Period	Seconds
Pulse Width	Seconds
Duty Cycle	Percent
Edge Time	Seconds
Frequency Ratio	Unitless
Time Interval	Seconds
Phase	Degrees
Totalize	Occurences
DC Voltage	Volts
RMS Voltage	Volts RMS
Peak-to-Peak Voltage	Volts Peak-to-Peak

#### 4.3.30 Initiate

#### Description

Initiates a measurement based on the current configuration. You must configure the measurement type and input channel before calling this function. After you call this function, if the arm type is immediate the measurement commences immediately; if the arm type is external the Counter leaves the Idle state and waits for a start arm. To retrieve the measurement, call the Fetch function.

This function does not check the instrument status. Typically, you call this function only in a sequence of calls to other low-level driver functions. The sequence performs one operation. You use the low-level functions to optimize one or more aspects of interaction with the instrument. If you want to check the instrument status, call the IviCounter error query function at the conclusion of the sequence.

#### .NET Method Prototype

```
void Measurement.Initiate ();
```

#### COM Method Prototype

```
HRESULT Measurement. Initiate ();
```

#### C Function Prototype

ViStatus IviCounter Initiate (ViSession Vi);

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession

#### **Return Values**

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

## 4.3.31 Read

## Description

Initiates and fetches a measurement based on the current configuration. Read waits a maximum of MaxTimeMilliseconds (C/COM) or maxTime (.NET) for the imstrument to return a measurement. Read generates an error if it exceeds the MaxTimeMilliseconds or maxTime.

## .NET Method Prototype

```
Double Measurement.Read (PrecisionTimeSpan maximumTime);
```

## COM Method Prototype

## C Function Prototype

#### Parameters

Inputs	Description	Datatype	
Vi	Instrument handle	ViSession	
MaxTimeMillisec onds (C/COM)	Pass the maximum length of time in which to allow the read waveform measurement operation to complete. If the operation does not complete within this time interval, the function returns the Maximum Time Exceeded error. When this occurs, you can call IviCounter_Abort to cancel the read waveform operation and return the Counter to the Idle state.	ViInt32	
maximumTime (.NET)	Pass the maximum length of time in which to allow the read waveform measurement operation to complete. If the operation does not complete within this time interval, the method throws the Maximum Time Exceeded error. When this occurs, you can call IviCounter_Abort to cancel the read waveform operation and return the Counter to the Idle state.	PrecisionTimeSpan	

Outputs	Description	Datatype
Measurement	Returns the measured value.	ViReal64

Defined Values for MaxTimeMilliseconds Parameter (C/COM)

Name	De	Description	
		Language	Identifier
Max Time Immediate	Sets timeout to immediate. The function returns immediately. If no valid measurement value exists, the function returns the Max Time Exceeded error.		
		С	IVICOUNTER_VAL_MAX_TIME_IMMEDIATE
		COM	IviCounterMaxTimeImmediate
Max Time Infinite	Sets timeout to infinite. The function waits indefinitely for the measurement to complete.		
		С	IVICOUNTER_VAL_MAX_TIME_INFINITE
		COM	IviCounterMaxTimeInfinite

#### Defined Values for maximumTime Parameter (.NET)

Name	Description		
		Language	Identifier
Max Time Immediate	Sets timeout to immediate. The function returns immediately. If no valid measurement value exists, the function throws the Max Time Exceeded eexception.		
	.NET PrecisionTimeSpan.Zero		
Max Time Infinite	Sets timeout to infinite. The function waits indefinitely for the measurement to complete.		
		.NET	PrecisionTimeSpan.MaxValue

## Return Values (C/COM)

The IVI-3.2:*Inherent Capabilities Specification* defines general status codes that this function can return. The table below specifies additional class-defined status codes for this function.

<b>Completion Codes</b>	Description
Over Range Warning	This warning indicates that the signal exceeded the input range.
Measure Uncalibrated	This warning indicates that the data was captured while the counter timer was in an uncalibrated state.
Max Time Exceeded	This error indicates that the maximum time was exceeded before the operation completed.

#### .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this method.

Note that the .NET MaxTimeExceededException is defined in IVI-3.2: Inherent Capabilities Specification.

The table below specifies additional class-defined exceptions for this method.

Warning	Description	
	This warning indicates that the data was captured while the counter timer was in an uncalibrated state.	

#### **Units**

Units: The units depend on the Measurement Function you select as shown below.

Measurement Function	Units
Frequency	Hertz
Period	Seconds
Pulse Width	Seconds
Duty Cycle	Percent
Edge Time	Seconds
Frequency Ratio	Unitless
Time Interval	Seconds
Phase	Degrees
Totalize	Occurences
DC Voltage	Volts
RMS Voltage	Volts RMS
Peak-to-Peak Voltage	Volts Peak-to-Peak

## **Compliance Notes**

An IviCounter specific driver is not required to implement the Max Time Immediate or the Max Time Infinite defined values for the MaxTimeMilliseconds parameter to be compliant with the IviCounterBase capability group.

## 4.4 IviCounterBase Behavior Model

The following state diagram shows relationships between IviCounter frequency measurement capabilities (i.e. non-totalize measurements) and counter behavior.

# **Event Trigger Behavior Model**

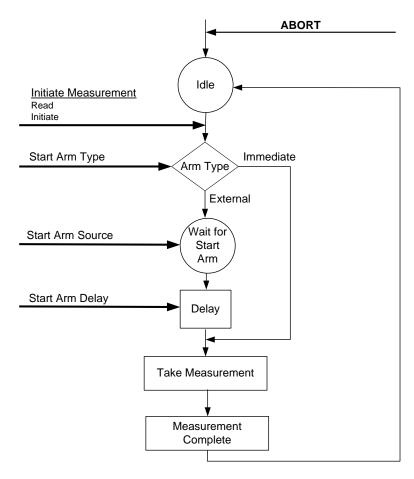


Figure 4-2. IviCounter Event Trigger Behavior Model

The following state diagram shows relationships between IviCounter totalize measurement capabilities (i.e. non-frequency measurements) and analyzer behavior.

# Initiate Measurement Read Initiate Stop Measurement Take Measurement Complete

## **Totalize Behavior Model**

Figure 4-3. IviCounter Totalize Behavior Model

The main state in the IviCounter Class is the Idle state. The Counter enters the Idle state as the result of being "powered-on", successfully completing a measurement, or by being aborted from a previous measurement by the user with the Abort function. Typically, the user configures the Counter while it is in the Idle state by calling the configure measurement functions. Each measurement has corresponding estimate and resolution parameters that characterize the measurement. The estimate and resolution are used within the driver to calculate and set physical instrument parameters. For example, the Frequency Estimate and Resolution for the Measure Frequency function provide the necessary information for calculating instrument parameters such as gate time, averaging on or off, digits of resolution, etc. The IviCounter attributes can also be configured individually with the Set Attribute function.

The Measure, Read, and Initiate functions cause the Counter to leave the Idle state and transition to the *Wait-For-End-Of-Measurement* state. The Measure and Read functions do not return until the measurement process is complete and the Counter has returned to the Idle state. The Initiate function returns as soon as the Counter leaves the Idle state.

The Fetch function is used to retrieve data measurements that were initiated by the Initiate function. The measurement data returned from the Measure, Read, and Fetch functions is acquired after the Counter has left *Wait-For-End-Of-Measurement* state.

# 5 IviCounterFilter Extension Group

## 5.1 IviCounterFilter Extension Group Overview

The IviCounterFilter extension group defines extensions for setting the minimum and maximum filter frequencies for the input signal.

## 5.2 IviCounterFilter Attributes

The IviCounterFilter capability group defines the following attributes:

- Minimum Frequency
- Maximum Frequency

This section describes the behavior and requirements of each attribute. The actual value for each attribute ID is defined in Section 8, *IviCounter Attribute ID Definitions*.

# 5.2.1 Minimum Frequency

Data Type	Access	Applies To	Coercion	High Level Functions
ViReal64	R/W	Channels	Down	Configure Filter

#### .NET Property Name

Channels[].MinimumFrequency

## **COM Property Name**

Channels.Item().MinimumFrequency

## **C** Constant Name

IVICOUNTER ATTR FILTER MINIMUM FREQUENCY

#### Description

Specifies the low cutoff frequency for the filter in hertz. Set to zero to disable low frequency filtering.

#### .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

## **Compliance Notes**

1. MinimumFrequency must be less than the MaximumFrequency. If zero is specified for the minimum frequency, the instruments minimum frequency shall be used.

## 5.2.2 Maximum Frequency

Data Type	Access	Applies To	Coercion	High Level Functions
ViReal64	R/W	Channels	Up	Configure Filter

#### .NET Property Name

Channels[].MaximumFrequency

## **COM Property Name**

Channels.Item().MaximumFrequency

## **C** Constant Name

IVICOUNTER ATTR FILTER MAXIMUM FREQUENCY

#### Description

Specifies the high cutoff frequency for the filter in hertz. Set to positive infinity to disable high frequency filtering.

## .NET Exceptions

The *IVI-3.2: Inherent Capabilities Specification* defines general exceptions that may be thrown, and warning events that may be raised, by this property.

## **Compliance Notes**

1. MaximumFrequency must be greater than the MinimumFrequency. If positive infinity is specified for the maximum frequency, the instruments maximum frequency shall be used.

## 5.3 IviCounterFilter Function

The IviCounterFilter capability group defines the following extended function:

• Configure Filter

This section describes the behavior and requirements of the function.

### 5.3.1 Configure Filter

### Description

Sets the bandpass filter minimum and maximum frequencies for a channel.

### .NET Method Prototype

#### COM Method Prototype

```
HRESULT Channels.Item().ConfigureFilter ([in] DOUBLE MinimumFrequency, [in] DOUBLE MaximumFrequency);
```

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel name you want to configure.	ViConstString
MinimumFrequency	Specifies the minimum filter frequency. The driver uses this value to set the Minimum Frequency attribute. See the attribute description for more details.	ViReal64
MaximumFrequency	Specifies the maximum filter frequency. The driver uses this value to set the Maximum Frequency attribute. See the attribute description for more details.	ViReal64

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

#### .NET Exceptions

### 5.4 IviCounterFilter Behavior Model

The IviCounterFilter extension group follows the same behavior model as the IviCounterBase capability group described in Section 4.4, *IviCounterBase Behavior Model*.

### 5.5 IviCounterFilter Compliance Notes

1. For a specific driver to comply with the IviCounterFilter extension, it shall be compliant with the IviCounterBase capability group and it shall implement all the functions listed in this section.

### 6 IviCounterTimeIntervalStopHoldoff Extension Group

### 6.1 IviCounterTimeIntervalStopHoldoff Extension Group Overview

The IviCounterTimeIntervalStopHoldoff extension group defines attributes and functions for setting the delay time for the Time Interval functions.

### 6.2 IviCounterTimeIntervalStopHoldoff Attribute

The IviCounterTimeIntervalStopHoldoff capability group defines the following attribute:

• Time Interval Stop Holdoff

This section describes the behavior and requirements of the attribute. The actual value for the attribute ID is defined in Section 8, *IviCounter Attribute ID Definitions*.

### 6.2.1 Time Interval Stop Holdoff

Data Type	Access	Applies To	Coercion	High Level Functions
ViReal64 (C/COM)	R/W	N/A	See Note	Configure Time Interval Stop Holdoff
PrecisionTimeSpan (.NET)				

#### .NET Property Name

TimeInterval.StopHoldoff

#### **COM Property Name**

TimeInterval.StopHoldoff

#### **C Constant Name**

IVICOUNTER\_ATTR\_TIME\_INTERVAL\_STOP\_HOLDOFF

#### **Description**

Specifies the stop holdoff time for a Time Interval measurement. The stop holdoff time is the time from the Time Interval Start Channel Trigger until the Time Interval Stop Channel Trigger is enabled. For C and COM, the units are seconds. For .NET, the units are implicit in the PrecisionTimeSpan type.

**Note**: Many counters have a small, non-zero value as the minimum value for this attribute. To configure the instrument to use the shortest stop hold-off, the user can specify a value of zero for this attribute. Therefore, the IVI Class-Compliant specific driver shall coerce any value between zero and the minimum value to the minimum value. No other coercion is allowed on this attribute..

### .NET Exceptions

### 6.3 IviCounterTimeIntervalStopHoldoff Function

The IviCounterTimeIntervalStopHoldoff capability group defines the following extended function:

• Configure Time Interval Stop Holdoff (IVI-C)

This section describes the behavior and requirements of the function.

### 6.3.1 Configure Time Interval Stop Holdoff (IVI-C Only)

### Description

Configures the Time Interval Stop Holdoff time in seconds.

### .NET Method Prototype

```
N/A (Use the TimeInterval.StopHoldoff Property)
```

### COM Method Prototype

```
{
m N/A} (Use the TimeInterval.StopHoldoff Property)
```

### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Time	Specifies the value of the Stop Holdoff in seconds	ViReal64

#### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

### 6.4 IviCounterTimeIntervalStopHoldoff Behavior Model

The IviCounterTimeIntervalStopHoldoff extension group follows the same behavior model as the IviCounterBase capability group described in Section 4.4, *IviCounterBase Behavior Model*.

### 6.5 IviCounterTimeIntervalStopHoldoff Compliance Notes

1. For a specific driver to comply with the IviCounterTimeIntervalStopHoldoff extension, it shall be compliant with the IviCounterBase capability group and it shall implement all the functions listed in this section.

### 7 IviCounterVoltageMeasurement Extension Group

### 7.1 IviCounterVoltageMeasurement Extension Group Overview

The IviCounterVoltageMeasurement extension group defines extensions for making voltage measurements on the input signal. The following measurements are provided:

- DC Voltage
- Maximum Voltage
- Minimum Voltage
- RMS Voltage
- Peak-to-Peak Voltage

### 7.2 IviCounterVoltageMeasurement Attributes

The IviCounterVoltageMeasurement capability group defines the following attributes:

- Voltage Channel
- Voltage Estimate
- Voltage Resolution

This section describes the behavior and requirements of each attribute. The actual value for each attribute ID is defined in Section 9, *IviCounter Attribute ID Definitions*.

### 7.2.1 Voltage Channel

D	ata Type	Access	Applies to	Coercion	High Level Functions
V	iString	R/W	N/A	None	Configure Voltage

### .NET Property Name

Voltage.Channel

### COM Property Name

Voltage.Channel

#### C Constant Name

IVICOUNTER\_ATTR\_VOLTAGE\_CHANNEL

### Description

Specifies the input channel the voltage is measured on.

### .NET Exceptions

### 7.2.2 Voltage Estimate

Data Type	Access	Applies to	Coercion	High Level Functions
ViReal64	R/W	N/A	None	Configure Voltage

### .NET Property Name

Voltage.Estimate

### COM Property Name

Voltage.Estimate

#### C Constant Name

IVICOUNTER\_ATTR\_VOLTAGE\_ESTIMATE

### Description

Specifies the estimated voltage, in volts, for the voltage function.

### .NET Exceptions

### 7.2.3 Voltage Resolution

	Data Type	Access	Applies to	Coercion	High Level Functions
Ī	ViReal64	R/W	N/A	None	Configure Voltage

### .NET Property Name

Voltage.Resolution

### COM Property Name

Voltage.Resolution

#### C Constant Name

IVICOUNTER\_ATTR\_VOLTAGE\_RESOLUTION

### Description

Specifies the resolution of the measurement, in volts, for the voltage function.

### .NET Exceptions

### 7.3 IviCounterVoltageMeasurement Function

The IviCounterVoltageMeasurement capability group defines the following extended function:

• Configure Voltage

This section describes the behavior and requirements of the function.

### 7.3.1 Configure Voltage Measurement

### Description

Configures the voltage function, the estimate, and the resolution attributes for a voltage measurement.

### .NET Method Prototype

### COM Method Prototype

#### C Function Prototype

#### Parameters

Inputs	Description	Base Type
Vi	Instrument handle.	ViSession
Channel	Specifies the channel the voltage will be measured on. The driver sets the Voltage Channel attribute to this value.	ViConstString
Function (C/COM) measurementFunction (.NET)	Specifies the voltage function. Valid functions: DC Voltage, Maximum Voltage, Minimum Voltage, RMS Voltage, and Peak-to-Peak Voltage. The driver sets the Measurement Function attribute to this value. See Section 4.2.1, <i>Measurement Function</i> for details.	ViInt32
Estimate	Specifies the estimated voltage. The driver sets the Voltage Estimate attribute to this value.	ViReal64
Resolution	Specifies the resolution of the voltage measurement. It is the quantization size, i.e. the smallest delta value that can be detected. The driver sets the Voltage Resolution attribute to this value.	ViReal64

### Return Values

The IVI-3.2:Inherent Capabilities Specification defines general status codes that this function can return.

### .NET Exceptions

### 7.4 IviCounterVoltageMeasurement Behavior Model

The IviCounterVoltageMeasurement extension group follows the same behavior model as the IviCounterBase capability group described in Section 4.4, *IviCounterBase Behavior Model*.

### 7.5 IviCounterVoltageMeasurement Compliance Notes

1. For a specific driver to comply with the IviCounterVoltageMeasurement extension, it shall be compliant with the IviCounterBase capability group and it shall implement all the functions listed in this section.

### 8 IviCounterEdgeTimeReferenceLevels Extension Group

### 8.1 IviCounterEdgeTimeReferenceLevels Extension Group Overview

The IviCounterEdgeTimeReferenceLevels extension implements percentage base edge time measurements. The base IviCounterEdgeTimeReferenceLevels function is used and the valid ReferenceType value is Percent.

### 8.2 IviCounterEdgeTimeReferenceLevels Behavior Model

The IviCounterEdgeTimeReferenceLevels extension group follows the same behavior model as the IviCounterBase capability group described in Section 4.4, *IviCounterBase Behavior Model*.

### 8.3 IviCounterEdgeTimeReferenceLevels Compliance Notes

1. For a specific driver to comply with the IviCounterEdgeTimeReferenceLevels extension, it shall be compliant with the IviCounterBase capability group

# 9 IviCounter Attribute ID Definitions

The following table defines the ID value for all IviCounter class attributes.

Table 9-1. IviCounter Attributes ID Values

Attribute Name	ID Definition
IVICOUNTER_ATTR_MEASUREMENT_FUNCTION	IVI_CLASS_ATTR_BASE + 3
IVICOUNTER_ATTR_CHANNEL_COUNT	IVI_INHERENT_ATTR_BASE + 203
IVICOUNTER_ATTR_IMPEDANCE	IVI_CLASS_ATTR_BASE + 4
IVICOUNTER_ATTR_COUPLING	IVI_CLASS_ATTR_BASE + 5
IVICOUNTER_ATTR_ATTENUATION	IVI_CLASS_ATTR_BASE + 6
IVICOUNTER_ATTR_CHANNEL_LEVEL	IVI_CLASS_ATTR_BASE + 7
IVICOUNTER_ATTR_CHANNEL_HYSTERESIS	IVI_CLASS_ATTR_BASE + 8
IVICOUNTER_ATTR_CHANNEL_SLOPE	IVI_CLASS_ATTR_BASE + 9
IVICOUNTER_ATTR_FILTER_ENABLED	IVI_CLASS_ATTR_BASE + 10
IVICOUNTER_ATTR_FREQUENCY_CHANNEL	IVI_CLASS_ATTR_BASE + 11
IVICOUNTER_ATTR_FREQUENCY_ESTIMATE	IVI_CLASS_ATTR_BASE + 12
IVICOUNTER_ATTR_FREQUENCY_RESOLUTION	IVI_CLASS_ATTR_BASE + 13
IVICOUNTER_ATTR_FREQUENCY_APERTURE_TIME	IVI_CLASS_ATTR_BASE + 14
IVICOUNTER_ATTR_FREQUENCY_ESTIMATE_AUTO	IVI_CLASS_ATTR_BASE + 15
IVICOUNTER_ATTR_FREQUENCY_RESOLUTION_AUTO	IVI_CLASS_ATTR_BASE + 16
IVICOUNTER_ATTR_PERIOD_CHANNEL	IVI_CLASS_ATTR_BASE + 18
IVICOUNTER_ATTR_PERIOD_ESTIMATE	IVI_CLASS_ATTR_BASE + 19
IVICOUNTER_ATTR_PERIOD_RESOLUTION	IVI_CLASS_ATTR_BASE + 20
IVICOUNTER_ATTR_PERIOD_APERTURE_TIME	IVI_CLASS_ATTR_BASE + 21
IVICOUNTER_ATTR_PULSE_WIDTH_CHANNEL	IVI_CLASS_ATTR_BASE + 22
IVICOUNTER_ATTR_PULSE_WIDTH_ESTIMATE	IVI_CLASS_ATTR_BASE + 23
IVICOUNTER_ATTR_PULSE_WIDTH_RESOLUTION	IVI_CLASS_ATTR_BASE + 24
IVICOUNTER_ATTR_DUTY_CYCLE_CHANNEL	IVI_CLASS_ATTR_BASE + 25
IVICOUNTER_ATTR_DUTY_CYCLE_FREQUENCY_ESTIMATE	IVI_CLASS_ATTR_BASE + 26
IVICOUNTER_ATTR_DUTY_CYCLE_RESOLUTION	IVI_CLASS_ATTR_BASE + 27
IVICOUNTER_ATTR_EDGE_TIME_CHANNEL	IVI_CLASS_ATTR_BASE + 28
IVICOUNTER_ATTR_EDGE_TIME_REFERENCE_TYPE	IVI_CLASS_ATTR_BASE + 29
IVICOUNTER_ATTR_EDGE_TIME_ESTIMATE	IVI_CLASS_ATTR_BASE + 30
IVICOUNTER_ATTR_EDGE_TIME_RESOLUTION	IVI_CLASS_ATTR_BASE + 31
IVICOUNTER_ATTR_EDGE_TIME_HIGH_REFERENCE	IVI_CLASS_ATTR_BASE + 32

Table 9-1. IviCounter Attributes ID Values

IVI_CLASS_ATTR_BASE + 33  IVICOUNTER_ATTR_FREQUENCY_RATIO_NUMERATOR_CHANNEL	Attribute Name	ID Definition
IVICOUNTER_ATTR_FREQUENCY_RATIO_DENOMINATOR_CHANNEL IVICOUNTER_ATTR_FREQUENCY_RATIO_NUMERATOR_FREQUENCY_ES IVICOUNTER_ATTR_FREQUENCY_RATIO_ESTIMATE  IVICOUNTER_ATTR_FREQUENCY_RATIO_ESTIMATE IVICOUNTER_ATTR_FREQUENCY_RATIO_RESOLUTION  IVI_CLASS_ATTR_BASE + 37  IVICOUNTER_ATTR_TIME_INTERVAL_STATT_CHANNEL IVI_CLASS_ATTR_BASE + 38  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL IVI_CLASS_ATTR_BASE + 40  IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION IVI_CLASS_ATTR_BASE + 41  IVICOUNTER_ATTR_PHASE_INTERVAL_RESOLUTION IVI_CLASS_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_INTERVAL_RESOLUTION IVI_CLASS_ATTR_BASE + 43  IVICOUNTER_ATTR_PHASE_INTERVAL_RESOLUTION IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_RESOLUTION IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_RESOLUTION IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_RESOLUTION IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_RESOLUTION IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_PHASE_RESOLUTION IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STAP_ARM_SOURCE IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STAP_ARM_SOURCE IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STAP_ARM_SOURCE IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR	IVICOUNTER_ATTR_EDGE_TIME_LOW_REFERENCE	IVI_CLASS_ATTR_BASE + 33
IVICOUNTER_ATTR_FREQUENCY_RATIO_NUMERATOR_FREQUENCY_ES IVICOUNTER_ATTR_FREQUENCY_RATIO_ESTIMATE IVICOUNTER_ATTR_FREQUENCY_RATIO_ESTIMATE IVICOUNTER_ATTR_FREQUENCY_RATIO_RESOLUTION IVI_CLASS_ATTR_BASE + 37 IVICOUNTER_ATTR_TIME_INTERVAL_START_CHANNEL IVI_CLASS_ATTR_BASE + 38 IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL IVI_CLASS_ATTR_BASE + 40 IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE IVI_CLASS_ATTR_BASE + 41 IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION IVI_CLASS_ATTR_BASE + 42 IVICOUNTER_ATTR_PHASE_INPUT_CHANNEL IVI_CLASS_ATTR_BASE + 43 IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL IVI_CLASS_ATTR_BASE + 44 IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL IVI_CLASS_ATTR_BASE + 45 IVICOUNTER_ATTR_PHASE_RESOLUTION IVI_CLASS_ATTR_BASE + 46 IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 46 IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 47 IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 49 IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 49 IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 50 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 50 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 50 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 50 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51 IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL IVI_CLASS_ATTR_BASE + 51 IVICOUNTER_ATTR_ENTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 52 IVICOUNTER_ATTR_ENTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 54 IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 56 IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE IVI_CLASS_ATTR_BASE + 56 IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE IVI_CLASS_ATTR_BASE + 56 IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE IVI_CLASS_ATTR_BASE + 60 IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE IVI_CLASS_ATTR_BASE + 62 IVICOUNTER_ATTR_EXTERNAL_ST	IVICOUNTER_ATTR_FREQUENCY_RATIO_NUMERATOR_CHANNEL	IVI_CLASS_ATTR_BASE + 34
TIMATE  IVICOUNTER ATTR FREQUENCY RATIO ESTIMATE  IVICOUNTER ATTR FREQUENCY RATIO ESTIMATE  IVICOUNTER ATTR FREQUENCY RATIO RESOLUTION  IVICLASS ATTR BASE + 38  IVICOUNTER ATTR TIME INTERVAL START CHANNEL  IVICLASS ATTR BASE + 39  IVICOUNTER ATTR TIME INTERVAL START CHANNEL  IVICLASS ATTR BASE + 40  IVICOUNTER ATTR TIME INTERVAL STOP CHANNEL  IVICLASS ATTR BASE + 41  IVICOUNTER ATTR TIME INTERVAL ESTIMATE  IVICLASS ATTR BASE + 42  IVICOUNTER ATTR THASE INPUT CHANNEL  IVICLASS ATTR BASE + 43  IVICOUNTER ATTR PHASE REFERENCE CHANNEL  IVICOUNTER ATTR PHASE PREQUENCY ESTIMATE  IVICOUNTER ATTR PHASE FREQUENCY ESTIMATE  IVICOUNTER ATTR CONTINUOUS TOTALIZE CHANNEL  IVICOUNTER ATTR GATED TOTALIZE CHANNEL  IVICUUNTER ATTR GATED TOTALIZE CHANNEL  IVICUUNTER ATTR GATED TOTALIZE GATE SOURCE  IVICUUNTER ATTR TIMED TOTALIZE GATE SLOPE  IVICUUNTER ATTR TIMED TOTALIZE GATE SLOPE  IVICUUNTER ATTR TIMED TOTALIZE GATE TIME  IVICULASS ATTR BASE + 50  IVICOUNTER ATTR TIMED TOTALIZE GATE TIME  IVICLASS ATTR BASE + 51  IVICOUNTER ATTR TIMED TOTALIZE GATE TIME  IVICLASS ATTR BASE + 51  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 53  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVICLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVICLASS ATTR BASE + 60  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVICLASS ATTR BASE + 61  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVICOUNTER ATTR BXEE AND SOURCE  IVICLASS ATTR BASE + 62  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVICLASS ATTR B	IVICOUNTER_ATTR_FREQUENCY_RATIO_DENOMINATOR_CHANNEL	IVI_CLASS_ATTR_BASE + 35
IVICOUNTER_ATTR_FREQUENCY_RATIO_RESOLUTION  IVI_CLASS_ATTR_BASE + 38  IVICOUNTER_ATTR_TIME_INTERVAL_START_CHANNEL  IVI_CLASS_ATTR_BASE + 40  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_BASE + 41  IVICOUNTER_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_INTERVAL_RESOLUTION  IVI_CLASS_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_INTERVAL_RESOLUTION  IVI_CLASS_ATTR_BASE + 43  IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_EVEL  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_A		IVI_CLASS_ATTR_BASE + 36
IVICOUNTER_ATTR_TIME_INTERVAL_START_CHANNEL  IVI_CLASS_ATTR_BASE + 39  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL  IVI_CLASS_ATTR_BASE + 40  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION  IVI_CLASS_ATTR_BASE + 41  IVICOUNTER_ATTR_PHASE_INDUT_CHANNEL  IVI_CLASS_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVI_CLASS_ATTR_BASE + 43  IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_BEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE +	IVICOUNTER_ATTR_FREQUENCY_RATIO_ESTIMATE	IVI_CLASS_ATTR_BASE + 37
IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_BASE + 41  IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION  IVI_CLASS_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_INPUT_CHANNEL  IVI_CLASS_ATTR_BASE + 43  IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 56  IVI_CLASS_ATTR_BASE + 56  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STAP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_D	IVICOUNTER_ATTR_FREQUENCY_RATIO_RESOLUTION	IVI_CLASS_ATTR_BASE + 38
IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE  IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION  IVI_CLASS_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_INPUT_CHANNEL  IVI_CLASS_ATTR_BASE + 43  IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_CATE_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_BLOPE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_BLOPE  IVI_CLASS_ATTR_BASE + 6	IVICOUNTER_ATTR_TIME_INTERVAL_START_CHANNEL	IVI_CLASS_ATTR_BASE + 39
IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION  IVI_CLASS_ATTR_BASE + 42  IVICOUNTER_ATTR_PHASE_INPUT_CHANNEL  IVI_CLASS_ATTR_BASE + 43  IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVI_CLASS_ATTR_BASE + 44  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 45  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501	IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL	IVI_CLASS_ATTR_BASE + 40
IVICOUNTER ATTR PHASE INPUT CHANNEL  IVI CLASS ATTR BASE + 43  IVICOUNTER ATTR PHASE REFERENCE CHANNEL  IVI CLASS ATTR BASE + 44  IVICOUNTER ATTR PHASE FREQUENCY ESTIMATE  IVI CLASS ATTR BASE + 45  IVICOUNTER ATTR PHASE RESOLUTION  IVI CLASS ATTR BASE + 46  IVICOUNTER ATTR CONTINUOUS TOTALIZE CHANNEL  IVICOUNTER ATTR GATED TOTALIZE CHANNEL  IVICOUNTER ATTR GATED TOTALIZE CHANNEL  IVICOUNTER ATTR GATED TOTALIZE GATE SOURCE  IVI CLASS ATTR BASE + 48  IVICOUNTER ATTR GATED TOTALIZE GATE SOURCE  IVI CLASS ATTR BASE + 50  IVICOUNTER ATTR GATED TOTALIZE GATE SLOPE  IVICOUNTER ATTR TIMED TOTALIZE GATE TIME  IVICOUNTER ATTR BASE + 51  IVICOUNTER ATTR TIMED TOTALIZE GATE TIME  IVICOUNTER ATTR BASE + 52  IVICOUNTER ATTR BASE + 52  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVI CLASS ATTR BASE + 54  IVICOUNTER ATTR EXTERNAL START ARM LEVEL  IVICOUNTER ATTR EXTERNAL START ARM LEVEL  IVICOUNTER ATTR EXTERNAL START ARM SLOPE  IVICOUNTER ATTR EXTERNAL START ARM DELAY  IVICOUNTER ATTR EXTERNAL START ARM DELAY  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVI CLASS ATTR BASE + 58  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVI CLASS ATTR BASE + 60  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVICOUNTER ATTR EXTERNAL STOP ARM DELAY  IVICOUNTER ATTR BASE + 61  IVICOUNTER ATTR EXTERNAL STOP ARM DELAY  IVICOUNTER ATTR BASE + 501  IVICOUNTER ATTR FILTER MINIMUM FREQUENCY  IVICOUNTER ATTR BASE + 502  IVICOUNTER ATTR TIME INTERVAL STOP HOLDOFF  IVICOUNTER ATTR BASE + 601	IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE	IVI_CLASS_ATTR_BASE + 41
IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL  IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVICOUNTER_ATTR_BHASE_FREQUENCY_ESTIMATE  IVICOUNTER_ATTR_BHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVI_CLASS_ATTR_BASE + 60  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMMM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMMM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMMM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501	IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION	IVI_CLASS_ATTR_BASE + 42
IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE  IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_TILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TILTER_INTERVAL_STOP_HOLDOFF  IVICOUNTER_ATTR_BASE + 601	IVICOUNTER_ATTR_PHASE_INPUT_CHANNEL	IVI_CLASS_ATTR_BASE + 43
IVICOUNTER_ATTR_PHASE_RESOLUTION  IVI_CLASS_ATTR_BASE + 46  IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_STARM_TYPE  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_EXTERNAL_STARM_SOURCE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TILTER_INTERVAL_STOP_HOLDOFF  IVICOUNTER_ATTR_BASE + 601	IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL	IVI_CLASS_ATTR_BASE + 44
IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 47  IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 48  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVI_CLASS_ATTR_BASE + 60  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_IIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE	IVI_CLASS_ATTR_BASE + 45
IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE  IVI_CLASS_ATTR_BASE + 49  IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501	IVICOUNTER_ATTR_PHASE_RESOLUTION	IVI_CLASS_ATTR_BASE + 46
IVICOUNTER ATTR GATED TOTALIZE GATE SOURCE  IVI CLASS ATTR BASE + 49  IVICOUNTER ATTR GATED TOTALIZE GATE SLOPE  IVI CLASS ATTR BASE + 50  IVICOUNTER ATTR TIMED TOTALIZE CHANNEL  IVI CLASS ATTR BASE + 51  IVICOUNTER ATTR TIMED TOTALIZE GATE TIME  IVI CLASS ATTR BASE + 52  IVICOUNTER ATTR START ARM TYPE  IVI CLASS ATTR BASE + 53  IVICOUNTER ATTR EXTERNAL START ARM SOURCE  IVI CLASS ATTR BASE + 54  IVICOUNTER ATTR EXTERNAL START ARM LEVEL  IVI CLASS ATTR BASE + 55  IVICOUNTER ATTR EXTERNAL START ARM SLOPE  IVI CLASS ATTR BASE + 56  IVICOUNTER ATTR EXTERNAL START ARM DELAY  IVI CLASS ATTR BASE + 57  IVICOUNTER ATTR STOP ARM TYPE  IVI CLASS ATTR BASE + 58  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVI CLASS ATTR BASE + 59  IVICOUNTER ATTR EXTERNAL STOP ARM SOURCE  IVI CLASS ATTR BASE + 60  IVICOUNTER ATTR EXTERNAL STOP ARM SLOPE  IVI CLASS ATTR BASE + 61  IVICOUNTER ATTR EXTERNAL STOP ARM DELAY  IVI CLASS ATTR BASE + 62  IVICOUNTER ATTR EXTERNAL STOP ARM DELAY  IVI CLASS ATTR BASE + 501  IVICOUNTER ATTR FILTER MINIMUM FREQUENCY  IVI CLASS ATTR BASE + 502  IVICOUNTER ATTR FILTER MAXIMUM FREQUENCY  IVI CLASS ATTR BASE + 601	IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL	IVI_CLASS_ATTR_BASE + 47
IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE  IVI_CLASS_ATTR_BASE + 50  IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL  IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_STOP_ARM_TYPE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL	IVI_CLASS_ATTR_BASE + 48
IVI_CLASS_ATTR_BASE + 51  IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME	IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE	IVI_CLASS_ATTR_BASE + 49
IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME  IVI_CLASS_ATTR_BASE + 52  IVICOUNTER_ATTR_START_ARM_TYPE  IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_STOP_ARM_TYPE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE	IVI_CLASS_ATTR_BASE + 50
IVI_CLASS_ATTR_BASE + 53  IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE	IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL	IVI_CLASS_ATTR_BASE + 51
IVI_CLASS_ATTR_BASE + 54  IVICOUNTER_ATTR_EXTERNAL_START_ARM_EVEL	IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME	IVI_CLASS_ATTR_BASE + 52
IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 55  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_STOP_ARM_TYPE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_START_ARM_TYPE	IVI_CLASS_ATTR_BASE + 53
IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 56  IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_STOP_ARM_TYPE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE	IVI_CLASS_ATTR_BASE + 54
IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY  IVI_CLASS_ATTR_BASE + 57  IVICOUNTER_ATTR_STOP_ARM_TYPE  IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL	IVI_CLASS_ATTR_BASE + 55
IVI_CLASS_ATTR_BASE + 58  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE	IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE	IVI_CLASS_ATTR_BASE + 56
IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE  IVI_CLASS_ATTR_BASE + 59  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL  IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE  IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY	IVI_CLASS_ATTR_BASE + 57
IVI_CLASS_ATTR_BASE + 60  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE	IVICOUNTER_ATTR_STOP_ARM_TYPE	IVI_CLASS_ATTR_BASE + 58
IVI_CLASS_ATTR_BASE + 61  IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE	IVI_CLASS_ATTR_BASE + 59
IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY  IVI_CLASS_ATTR_BASE + 62  IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL	IVI_CLASS_ATTR_BASE + 60
IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 501  IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY  IVI_CLASS_ATTR_BASE + 502  IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF  IVI_CLASS_ATTR_BASE + 601	IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE	IVI_CLASS_ATTR_BASE + 61
IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY	IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY	IVI_CLASS_ATTR_BASE + 62
IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY	IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY	IVI_CLASS_ATTR_BASE + 501
IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF		
	IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF	IVI_CLASS_ATTR_BASE + 601
	IVICOUNTER_ATTR_VOLTAGE_CHANNEL	IVI_CLASS_ATTR_BASE + 701

Table 9-1. IviCounter Attributes ID Values

Attribute Name	ID Definition
IVICOUNTER_ATTR_VOLTAGE_ESTIMATE	IVI_CLASS_ATTR_BASE + 702
IVICOUNTER_ATTR_VOLTAGE_RESOLUTION	IVI_CLASS_ATTR_BASE + 703

### 10 IviCounter Attribute Value Definitions

This section specifies the actual value for each defined attribute value.

### Coupling

Value Name	Language	Identifier	Actual Value
AC	С	IVICOUNTER_VAL_AC	1
	COM	IviCounterCouplingAC	1
	.NET	Coupling.AC	0
DC	С	IVICOUNTER_VAL_DC	2
	COM	IviCounterCouplingDC	2
	.NET	Coupling.DC	1
Coupling Class Extension Base	С	IVICOUNTER_VAL_COUPLING_CLASS_EXT_BASE	500
Coupling Specific	С	IVICOUNTER_VAL_COUPLING_SPECIFIC_EXT_BASE	1000
Extension Base	COM		1000

### Slope

Value Name	Language	Identifier	Actual Value
Negative	.NET	Slope.Negative	1
	С	IVICOUNTER_VAL_NEGATIVE	0
	COM	IviCounterSlopeNegative	0
Positive	.NET	Slope.Positive	0
	С	IVICOUNTER_VAL_POSITIVE	1
	COM	IviCounterSlopePositive	1
Slope Class Extension Base	С	IVICOUNTER_VAL_SLOPE_CLASS_EXT_BASE	500
Slope Specific	С	IVICOUNTER_VAL_SLOPE_SPECIFIC_EXT_BASE	1000
Extension Base	COM		1000

Measurement Function

Value Name	Language	Identifier	Actual Value
Frequency	С	IVICOUNTER_VAL_FREQUENCY	1
	COM	IviCounterFunctionFrequency	1
	.NET	MeasurementFunction.Frequency	0
Frequency with	С	IVICOUNTER_VAL_FREQUENCY_WITH_APERTURE	2
Aperture	COM	IviCounterFunctionFrequencyWithAperture	2
	.NET	MeasurementFunction.FrequencyWithAperture	1
Period	С	IVICOUNTER_VAL_PERIOD	3
	COM	IviCounterFunctionPeriod	3
	.NET	MeasurementFunction.Period	2
Period with	С	IVICOUNTER_VAL_PERIOD_WITH_APERTURE	4
Aperture	COM	IviCounterFunctionPeriodWithAperture	4
	.NET	MeasurementFunction.PeriodWithAperture	3
Pulse Width	С	IVICOUNTER_VAL_PULSE_WIDTH	5
	COM	IviCounterFunctionPulseWidth	5
	.NET	MeasurementFunction.PulseWidth	4
Duty Cycle	С	IVICOUNTER_VAL_DUTY_CYCLE	6
	COM	IviCounterFunctionDutyCycle	6
	.NET	MeasurementFunction.DutyCycle	5
Edge Time	С	IVICOUNTER_VAL_EDGE_TIME	7
	COM	IviCounterFunctionEdgeTime	7
	.NET	MeasurementFunction.EdgeTime	6
Frequency Ratio	С	IVICOUNTER_VAL_FREQUENCY_RATIO	8
	COM	IviCounterFunctionFrequencyRatio	8
	.NET	MeasurementFunction.FrequencyRatio	7
Time Interval	С	IVICOUNTER_VAL_TIME_INTERVAL	9
	COM	IviCounterFunctionTimeInterval	9
	.NET	MeasurementFunction.TimeInterval	8
Phase	С	IVICOUNTER_VAL_PHASE	10
	COM	IviCounterFunctionPhase	10
	.NET	MeasurementFunction.Phase	9
Continuous	С	IVICOUNTER_VAL_CONTINUOUS_TOTALIZE	11
Totalize	COM	IviCounterFunctionContinuousTotalize	11
	.NET	MeasurementFunction.ContinuousTotalize	10
Gated Totalize	С	IVICOUNTER_VAL_GATED_TOTALIZE	12
	COM	IviCounterFunctionGatedTotalize	12
	.NET	MeasurementFunction.GatedTotalize	11

Value Name	Language	Identifier	Actual Value
Timed Totalize	С	IVICOUNTER_VAL_TIMED_TOTALIZE	13
	COM	IviCounterFunctionTimedTotalize	13
	.NET	MeasurementFunction.TimedTotalize	12
DC Voltage	С	IVICOUNTER_VAL_DC_VOLTAGE	14
	COM	IviCounterFunctionDCVoltage	14
	.NET	MeasurementFunction.DCVoltage	13
Maximum Voltage	С	IVICOUNTER_VAL_MAXIMUM_VOLTAGE	15
	COM	IviCounterFunctionMaximumVoltage	15
	.NET	MeasurementFunction.MaximumVoltage	14
Minimum Voltage	С	IVICOUNTER_VAL_MINIMUM_VOLTAGE	16
	COM	IviCounterFunctionMinimumVoltage	16
	.NET	MeasurementFunction.MinimumVoltage	15
RMS Voltage	С	IVICOUNTER_VAL_RMS_VOLTAGE	17
	COM	IviCounterFunctionRMSVoltage	17
	.NET	MeasurementFunction.RMSVoltage	16
Peak-to-Peak	С	IVICOUNTER_VAL_PEAK_TO_PEAK_VOLTAGE	18
Voltage	COM	IviCounterFunctionPeakToPeakVoltage	18
	.NET	MeasurementFunction.PeakToPeakVoltage	17
Measurement Function Class Extension Base	С	IVICOUNTER_VAL_MEASUREMENT_FUNCTION_CLASS_ EXT_BASE	500
Measurement Function Specific	С	IVICOUNTER_VAL_MEASUREMENT_FUNCTION_SPECIF IC_EXT_BASE	1000
Extension Base	COM		1000

### Arm Type

Value Name	Language	Identifier	Actua l Value
Immediate	С	IVICOUNTER_VAL_IMMEDIATE_ARM_TYPE	1
	COM	IviCounterArmTypeImmediate	1
	.NET	ArmType.Immediate	0
External	С	IVICOUNTER_VAL_EXTERNAL_ARM_TYPE	2
	COM	IviCounterArmTypeExternal	2
	.NET	ArmType.External	1

Value Name	Language	Identifier	Actua l Value
Arm Class Extension Base	С	IVICOUNTER_VAL_ARM_TYPE_CLASS_EXT_BASE	500
Arm Specific	С	IVICOUNTER_VAL_ARM_TYPE_SPECIFIC_EXT_BASE	1000
Extension Base	COM		1000

### Reference Type

Value Name	Language	Identifier	Actua l Value
Voltage	С	IVICOUNTER_VAL_VOLTAGE_REFERENCE_TYPE	1
	COM	IviCounterReferenceTypeVoltage	1
	.NET	ReferenceType.Voltage	0
Percent	С	IVICOUNTER_VAL_PERCENT_REFERENCE_TYPE	2
	COM	IviCounterReferenceTypePercent	2
	.NET	ReferenceType.Percent	1
Reference Class Extension Base	С	IVICOUNTER_VAL_REFERENCE_TYPE_CLASS_EXT_BASE	500
Reference Specific Extension Base	С	IVICOUNTER_VAL_REFERENCE_TYPE_SPECIFIC_EXT_BAS E	1000
	COM		1000

### 11 IviCounter Function Parameter Value Definitions

This section specifies the actual values for each function parameter that defines values.

### Maximum Time

Value Name	Language	Identifier	Actual Value
Max Time	С	IVICOUNTER_VAL_MAX_TIME_IMMEDIATE	0
Immediate	COM	IviCounterMaxTimeImmediate	0
Max Time Infinite	С	IVICOUNTER_VAL_MAX_TIME_INFINITE	-1
	COM	IviCounterMaxTimeInfinite	-1

### Measurement Status

Parameter: Status

Value Name	Language	Identifier	Actual Value
Measurement	С	IVICOUNTER_VAL_MEASUREMENT_COMPLETE	1
Complete	COM	IviCounterMeasurementStatusComplete	1
	.NET	MeasurementStatus.Complete	1
Measurement	С	IVICOUNTER_VAL_MEASUREMENT_IN_PROGRESS	0
In Progress	COM	IviCounterMeasurementStatusInProgress	0
	.NET	MeasurementStatus.InProgress	0
Measurement	С	IVICOUNTER_VAL_MEASUREMENT_STATUS_UNKNOWN	-1
Status Unknown	COM	IviCounterMeasurementStatusUnknown	-1
UlikilOWII	.NET	MeasurementStatus.Unknown	2

# 12 IviCounter Error, Completion Code, and Exception Class Definitions

The table below specifies the actual value for each status code, and the actual exception class and warning GUID for each IVI.NET exception and warning that the IviCounter class specification defines. Note that warnings are raised as events in .NET. See IVI-3.1 and IVI-3.2 for details.

Table 12-1. IviCounter Completion Codes

Error Name	De	escription		
		Language	Identifier	Value(hex)
Measure	Uı	ncalibrated	measurement	
Uncalibrated Warning		С	IVICOUNTER_WARN_MEASURE_UNCALIBRATED	0x3FFA2001
w arming		COM	S_IVICOUNTER_MEASURE_UNCALIBRATED	0x00042001
		.NET	N/A	{2D606B73- 601F-40f6- AE07- 2FDB5F086A09}
Over Range	M	easurement	overrange	
Warning		С	IVICOUNTER_WARN_OVER_RANGE	0x3FFA2002
		COM	S_IVICOUNTER_OVER_RANGE	0x00042002
		.NET	N/A	N/A
Max Time	M	ax Time Ex	ceeded	
Exceeded		C	IVICOUNTER_ERROR_MAX_TIME_EXCEEDED	0xBFFA2003
		COM	E_IVICOUNTER_MAX_TIME_EXCEEDED	0x80042003
		.NET	Ivi.Driver.MaxTimeExceededException	IVI defined exception (see IVI 3.2)

Table 12-2 defines the format of the message string associated with the errors. In C, these strings are returned by the Error Message function. In COM, these strings are the description contained in the ErrorInfo object. For .NET, exception default message strings are defined with the exception.

**Note:** In the description string table entries listed below, **%s** is always used to represent the component name.

Table 12-2. IviCounter Error Message Strings

Name	Message String
Measure Uncalibrated	"%s: The instrument was in an uncalibrated state when the measurement was taken."
Over Range	"%s:The measurement taken was over the instrument's range."
Max Time Exceeded	"%s: The maximum waiting time for this operation was exceeded."

# 13 IviCounter Hierarchies

# 13.1 IviCounter COM Hierarchy

COM Interface Hierarchy	Generic Name	Туре
Function	Measurement Function	P
Arm		
Start		
Туре	Start Arm Type	P
External		
Configure	Configure External Start Arm	M
Source	External Start Arm Source	P
Level	External Start Arm Level	P
Slope	External Start Arm Slope	P
Delay	External Start Arm Delay	P
Stop		
Туре	Stop Arm Type	P
External		
Configure	Configure External Stop Arm	M
Source	External Stop Arm Source	P
Level	External Stop Arm Level	P
Slope	External Stop Arm Slope	P
Delay	External Stop Arm Delay	P
Channels		
Count	Channel Count	P
Name	Channel Name	P
Item	Channel Item	P
Item		
Configure	Configure Channel	M
Impedance	Channel Impedance	P
Coupling	Channel Coupling	P
Attenuation	Channel Attenuation	P
ConfigureLevel	Configure Level	M
Level	Channel Level	P
Hysteresis	Channel Hysteresis	P
Slope	Channel Slope	P
- FilterEnabled	Channel Filter Enabled	P

COM Interface Hierarchy	Generic Name	Type
ConfigureFilter	Configure Filter	M
MaximumFrequency	Maximum Frequency	P
MinimumFrequency	Minimum Frequency	P
outyCycle		
Configure	Configure Duty Cycle	M
Channel	Duty Cycle Channel	P
FrequencyEstimate	Duty Cycle Frequency Estimate	P
Resolution	Duty Cycle Resolution	P
dgeTime		
Configure	Configure Edge Time	M
ConfigureReferenceLevels	Configure Edge Time Reference Levels	M
Channel	Edge Time Channel	P
ReferenceType	Edge Time Reference Type	P
Estimate	Edge Time Estimate	P
Resolution	Edge Time Resolution	P
HighReference	Edge Time High Reference	P
LowReference	Edge Time Low Reference	P
requency		
Configure	Configure Frequency	M
ConfigureManual	Configure Manual Frequency	M
Channel	Frequency Channel	P
Estimate	Frequency Estimate	P
Resolution	Frequency Resolution	P
ConfigureWithAperture	Configure Frequency with Aperture Time	M
ApertureTime	Frequency Aperture Time	P
EstimateAuto	Frequency Estimate Auto	P
ResolutionAuto	Frequency Resolution Auto	P
requencyRatio		
Configure	Configure Frequency Ratio	M
NumeratorChannel	Frequency Ratio Numerator Channel	P
DenominatorChannel	Frequency Ratio Denominator Channel	P
NumeratorFrequencyEstimat	Frequency Ratio Numerator Frequency Estimate	P
Estimate	Frequency Ratio Estimate	P
Resolution	Frequency Ratio Resolution	P
Measurement (		
IsMeasurementComplete	Is Measurement Complete	M

<b>COM Interface Hierarchy</b>	Generic Name	Type
Read	Read	M
Initiate	Initiate	M
Fetch	Fetch	M
Abort	Abort	M
Period		
Configure	Configure Period	M
Channel	Period Channel	P
Estimate	Period Estimate	P
Resolution	Period Resolution	P
ConfigureWithAperture	Configure Period with Aperture Time	M
ApertureTime	Period Aperture Time	P
Phase	-	
Configure	Configure Phase	M
InputChannel	Phase Input Channel	P
ReferenceChannel	Phase Reference Channel	P
FrequencyEstimate	Phase Frequency Estimate	P
Resolution	Phase Resolution	P
PulseWidth		
Configure	Configure Pulse Width	M
Channel	Pulse Width Channel	P
Estimate	Pulse Width Estimate	P
Resolution	Pulse Width Resolution	P
'imeInterval		
Configure	Configure Time Interval	M
StartChannel	Time Interval Start Channel	P
StopChannel	Time Interval Stop Channel	P
Estimate	Time Interval Estimate	P
Resolution	Time Interval Resolution	P
StopHoldoff	Time Interval Stop Holdoff	P
TotalizeContinuous		
Configure	Configure Continuous Totalize	M
Channel	Continuous Totalize Channel	P
Start	Start Continuous Totalize	M
Stop	Stop Continuous Totalize	M
FetchCount	Fetch Continuous Totalize Count	M

Table 13-1. IviCounter COM Hierarchy			
<b>COM Interface Hierarchy</b>	Generic Name	Туре	
Configure	Configure Gated Totalize	M	
Channel	Gated Totalize Channel	P	
GateSource	Gated Totalize Gate Source	P	
GateSlope	Gated Totalize Gate Slope	P	
TotalizeTimed			
Configure	Configure Timed Totalize	M	
Channel	Timed Totalize Channel	P	
GateTime	Timed Totalize Gate Time	P	
Voltage			
Configure	Configure Voltage Measurement	M	
Channel	Voltage Channel	P	
Estimate	Voltage Estimate	P	
Resolution	Voltage Resolution	P	

#### 13.1.1 IviCounter COM Interfaces

In addition to implementing IVI inherent capabilities interfaces, IviCounter interfaces contain interface reference properties for accessing the following IviCounter interfaces:

- IIviCounterChannels
- IIviCounterChannel
- IIviCounterFrequency
- IIviCounterPeriod
- IIviCounterPulseWidth
- IIviCounterDutyCycle
- IIviCounterEdgeTime
- IIviCounterFrequencyRatio
- IIviCounterTimeInterval
- IIviCounterPhase
- IIviCounterTotalizeContinuous
- IIviCounterTotalizeGated
- IIviCounterTotalizeTimed
- IIviCounterArm
- IIviCounterMeasurement
- IIviCounterVoltage

The IIviCounterArm interface contains interface reference properties for accessing the following additional IviCounter external mixer interfaces:

- IIviCounterArmStart
- IIviCounterArmStop

The IIviCounterArmStart interface contains interface reference properties for accessing the following additional IviCounter external mixer interfaces:

IIviCounterArmStartExternal

The IIviCounterArmStop interface contains interface reference properties for accessing the following additional IviCounter external mixer interfaces:

• IIviCounterArmStopExternal

The IIviCounterChannels interface contains methods and properties for accessing a collection of objects that implement the IIviCounterChannel interface.

The following table lists the interfaces that this specification defines and their GUIDs.

Table 13-2. IviCounter Interface GUIDs

Interface	GUID
IIviCounter	{ 47ed5378-a398-11d4-ba58-000064657374 }
IIviCounterChannels	{ 47ed5379-a398-11d4-ba58-000064657374 }
IIviCounterChannel	{ 47ed537a-a398-11d4-ba58-000064657374 }
IIviCounterPulseWidth	{ 47ed537b-a398-11d4-ba58-000064657374 }
IIviCounterDutyCycle	{ 47ed537c-a398-11d4-ba58-000064657374 }
IIviCounterEdgeTime	{ 47ed537d-a398-11d4-ba58-000064657374 }
IIviCounterFrequencyRatio	{ 47ed537e-a398-11d4-ba58-000064657374 }
IIviCounterTimeInterval	{ 47ed537f-a398-11d4-ba58-000064657374 }
IIviCounterPhase	{ 47ed5380-a398-11d4-ba58-000064657374 }
IIviCounterTotalizeTimed	{ 47ed5381-a398-11d4-ba58-000064657374 }
IIviCounterArm	{ 47ed5382-a398-11d4-ba58-000064657374 }
IIviCounterFrequency	{ 47ed5383-a398-11d4-ba58-000064657374 }
IIviCounterPeriod	{ 47ed5384-a398-11d4-ba58-000064657374 }
IIviCounterTotalizeContinuous	{ 47ed5385-a398-11d4-ba58-000064657374 }
IIviCounterTotalizeGated	{ 47ed5386-a398-11d4-ba58-000064657374 }
IIviCounterArmStart	{ 47ed5387-a398-11d4-ba58-000064657374 }
IIviCounterArmStartExternal	{ 47ed5388-a398-11d4-ba58-000064657374 }
IIviCounterArmStop	{ 47ed5389-a398-11d4-ba58-000064657374 }
IIviCounterArmStopExternal	{ 47ed538a-a398-11d4-ba58-000064657374 }
IIviCounterMeasurement	{ 47ed538c-a398-11d4-ba58-000064657374 }
IIviCounterVoltage	{ 47ed538d-a398-11d4-ba58-000064657374 }

# 13.1.2 IviCounter COM Interface Reference Properties

Interface reference properties are used to navigate the IviCounter COM hierarchy. This section describes the interface reference properties that the IviCounter interface defines.

Data Type	COM Property Name
IiviCounterChannels	Channels
IIviCounterFrequency	Frequency
IIviCounterPeriod	Period
IIviCounterPulseWidth	PulseWidth
IIviCounterDutyCycle	DutyCycle
IIviCounterEdgeTime	EdgeTime
IIvicounterFrequencyRatio	FrequencyRatio
IIviCounterTimeInterval	TimeInterval
IIviCounterPhase	Phase
IIviCounterTotalizeContinuous	TotalizeContinuous
IIviCounterTotalizeGated	TotalizeGated
IIviCounterTotalizeTimed	TotalizeTimed
IIviCounterArm	Arm
IIviCounterArmStart	Start
IIviCounterArmStartExternal	External
IIviCounterArmStop	Stop
IIviCounterArmStopExternal	External
IIviCounterMeasurement	Measurement
IIviCounterVoltage	Voltage

### 13.1.3 IviCounter COM Category

The IviCounter class COM Category shall be "IviCounter", and the Category ID (CATID) shall be { 47ed515d-a398-11d4-ba58-000064657374 }.

# 13.2 IviCounter C Function Hierarchy

The IviCounter class function hierarchy is shown in the following table.

The IviCounter class function hierarchy is shown in the following table.  Table 13-3. IviCounter C Function Hierarchy		
Name or Class	Function Name	
Configuration		
Configure Channel	IviCounter_ConfigureChannel	
Configure Level	IviCounter_ConfigureChannelLevel	
Configure Slope	IviCounter_ConfigureChannelSlope	
Configure Filter Enabled	IviCounter_ConfigureChannelFilterEnabled	
Configure Frequency	IviCounter_ConfigureFrequency	
	IviCounter_ConfigureFrequencyManual	
Configure Frequency With Aperture Time	IviCounter_ConfigureFrequencyWithApertureTime	
Configure Period	IviCounter_ConfigurePeriod	
Configure Period With Aperture Time	IviCounter_ConfigurePeriodWithApertureTime	
Configure Pulse Width	IviCounter_ConfigurePulseWidth	
Configure Duty Cycle	IviCounter_ConfigureDutyCycle	
Configure Edge Time	IviCounter_ConfigureEdgeTime	
Configure Edge Time Reference Levels	IviCounter_ConfigureEdgeTimeReferenceLevels	
Configure Frequency Ratio	IviCounter_ConfigureFrequencyRatio	
Configure Time Interval	IviCounter_ConfigureTimeInterval	
Configure Phase	IviCounter_ConfigurePhase	
Configure Continuous Totalize	IviCounter_ConfigureContinuousTotalize	
Configure Gated Totalize	IviCounter_ConfigureGatedTotalize	
Configure Timed Totalize	IviCounter_ConfigureTimedTotalize	
Configure Start Arm	IviCounter_ConfigureStartArm	
Configure External Start Arm	IviCounter_ConfigureExternalStartArm	
Configure Stop Arm	IviCounter_ConfigureStopArm	
Configure External Stop Arm	IviCounter_ConfigureExternalStopArm	
Configure Filter	IviCounter_ConfigureFilter	
Configure Time Interval Stop Holdoff	<pre>IviCounter_ConfigureTimeIntervalStopHoldoff</pre>	
Configure Voltage	IviCounter_ConfigureVoltage	
Measurement		
Start Continuous Totalize	IviCounter_StartContinuousTotalize	
Stop Continuous Totalize	IviCounter_StopContinuousTotalize	
Fetch Continuous Totalize Count	IviCounter_FetchContinuousTotalizeCount	
Read	IviCounter_Read	
Low Level Measurement		

Table 13-3. IviCounter C Function Hierarchy		
Name or Class	Function Name	
Initiate	IviCounter_Initiate	
Abort	IviCounter_Abort	
Fetch	IviCounter_Fetch	
IsMeasurementComplete	IviCounter_IsMeasurementComplete	

# 13.3 IviCounter C Attribute Hierarchy

The IviCounter class attribute hierarchy is shown in the following table.

C Defined Constant  IVICOUNTER_ATTR_START_ARM_TYPE
IVICOUNTER_ATTR_START_ARM_TYPE
IVICOUNTER_ATTR_START_ARM_TYPE
IVICOUNTER_ATTR_EXTERNAL_START_ARM_SOURCE
IVICOUNTER_ATTR_EXTERNAL_START_ARM_LEVEL
IVICOUNTER_ATTR_EXTERNAL_START_ARM_SLOPE
IVICOUNTER_ATTR_EXTERNAL_START_ARM_DELAY
IVICOUNTER_ATTR_STOP_ARM_TYPE
IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SOURCE
IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_LEVEL
IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_SLOPE
IVICOUNTER_ATTR_EXTERNAL_STOP_ARM_DELAY
IVICOUNTER_ATTR_CHANNEL_COUNT
IVICOUNTER_ATTR_IMPEDANCE
IVICOUNTER_ATTR_COUPLING
IVICOUNTER_ATTR_ATTENUATION
IVICOUNTER_ATTR_CHANNEL_LEVEL
IVICOUNTER_ATTR_CHANNEL_HYSTERESIS
IVICOUNTER_ATTR_CHANNEL_SLOPE
IVICOUNTER_ATTR_FILTER_ENABLED
IVICOUNTER_ATTR_FILTER_MINIMUM_FREQUENCY
IVICOUNTER_ATTR_FILTER_MAXIMUM_FREQUENCY
IVICOUNTER_ATTR_DUTY_CYCLE_CHANNEL
IVICOUNTER_ATTR_DUTY_CYCLE_FREQEUNCY_ESTIMA TE
IVICOUNTER_ATTR_DUTY_CYCLE_RESOLUTION
IVICOUNTER_ATTR_EDGE_TIME_CHANNEL
IVICOUNTER_ATTR_EDGE_TIME_CHANNEL  IVICOUNTER_ATTR_EDGE_TIME_REFERENCE_TYPE

Table 13-	-4. IviCounter C attributes Hierarchy
Category or Generic Attribute Name	C Defined Constant
Edge Time Estimate	IVICOUNTER_ATTR_EDGE_TIME_ESTIMATE
Edge Time Resolution	IVICOUNTER_ATTR_EDGE_TIME_RESOLUTION
Edge Time High Reference	IVICOUNTER_ATTR_EDGE_TIME_HIGH_REFERENCE
Edge Time Low Reference	IVICOUNTER_ATTR_EDGE_TIME_LOW_REFERENCE
Frequency Measurement	
Frequency Channel	IVICOUNTER_ATTR_FREQUENCY_CHANNEL
Frequency Estimate	IVICOUNTER_ATTR_FREQUENCY_ESTIMATE
Frequency Resolution	IVICOUNTER_ATTR_FREQUENCY_RESOLUTION
Frequency Aperture Time	IVICOUNTER_ATTR_FREQUENCY_APERTURE_TIME
Frequency Estimate Auto	IVICOUNTER_ATTR_FREQUENCY_ESTIMATE_AUTO
Frequency Resolution Auto	IVICOUNTER_ATTR_FREQUENCY_RESOLUTION_AUTO
Frequency Ratio Measurement	
Frequency Ratio Numerator Channel	IVICOUNTER_ATTR_FREQUENCY_RATIO_NUMERATOR_ CHANNEL
Frequency Ratio Denominator Channel	IVICOUNTER_ATTR_FREQUENCY_RATIO_DENOMINATO R_CHANNEL
Frequency Ratio Numerator Frequency Estimate	IVICOUNTER_ATTR_FREQUENCY_RATIO_NUMERATOR_ FREQUENCY_ESTIMATE
Frequency Ratio Estimate	IVICOUNTER_ATTR_FREQUENCY_RATIO_ESTIMATE
Frequency Ratio Resolution	IVICOUNTER_ATTR_FREQUENCY_RATIO_RESOLUTION
Measurement	
Measurement Function	IVICOUNTER_ATTR_MEASUREMENT_FUNCTION
Period Measurement	
Period Channel	IVICOUNTER_ATTR_PERIOD_CHANNEL
Period Estimate	IVICOUNTER_ATTR_PERIOD_ESTIMATE
Period Resolution	IVICOUNTER_ATTR_PERIOD_RESOLUTION
Period Aperture Time	IVICOUNTER_ATTR_PERIOD_APERTURE_TIME
Phase Measurement	
Phase Input Channel	IVICOUNTER_ATTR_PHASE_INPUT_CHANNEL
Phase Reference Channel	IVICOUNTER_ATTR_PHASE_REFERENCE_CHANNEL
Phase Frequency Estimate	IVICOUNTER_ATTR_PHASE_FREQUENCY_ESTIMATE

Table 13-	4. IviCounter C attributes Hierarchy
Category or Generic Attribute Name	C Defined Constant
Phase Resolution	IVICOUNTER_ATTR_PHASE_RESOLUTION
Pulse Width Measurement	
Pulse Width Channel	IVICOUNTER_ATTR_PULSE_WIDTH_CHANNEL
Pulse Width Estimate	IVICOUNTER_ATTR_PULSE_WIDTH_ESTIMATE
Pulse Width Resolution	IVICOUNTER_ATTR_PULSE_WIDTH_RESOLUTION
Time Interval Measurement	
Time Interval Start Channel	IVICOUNTER_ATTR_TIME_INTERVAL_START_CHANNEL
Time Interval Stop Channel	IVICOUNTER_ATTR_TIME_INTERVAL_STOP_CHANNEL
Time Interval Estimate	IVICOUNTER_ATTR_TIME_INTERVAL_ESTIMATE
Time Interval Resolution	IVICOUNTER_ATTR_TIME_INTERVAL_RESOLUTION
Time Interval Stop Holdoff	IVICOUNTER_ATTR_TIME_INTERVAL_STOP_HOLDOFF
Totalize Measurement	
Continuous Totalize Channel	IVICOUNTER_ATTR_CONTINUOUS_TOTALIZE_CHANNEL
Gated Totalize Channel	IVICOUNTER_ATTR_GATED_TOTALIZE_CHANNEL
Gated Totalize Gate Source	IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SOURCE
Gated Totalize Gate Slope	IVICOUNTER_ATTR_GATED_TOTALIZE_GATE_SLOPE
Timed Totalize Channel	IVICOUNTER_ATTR_TIMED_TOTALIZE_CHANNEL
Timed Totalize Gate Time	IVICOUNTER_ATTR_TIMED_TOTALIZE_GATE_TIME
Voltage Measurement	
Voltage Channel	IVICOUNTER_ATTR_VOLTAGE_CHANNEL
Voltage Estimate	IVICOUNTER_ATTR_VOLTAGE_ESTIMATE
Voltage Resolution	IVICOUNTER_ATTR_VOLTAGE_RESOLUTION

## 13.4 IviCounter .NET Hierarchy

The full IviCounter .NET Hierarchy includes the Inherent Capabilities Hierarchy as defined in Section 4.1, .*NET Inherent Capabilities* of *IVI-3.2: Inherent Capabilities Specification*. To avoid redundancy, the Inherent Capabilities are omitted here.

Table 13-5. IviCounter .NET Hierarchy			
.NET Interface Hierarchy	Generic Name	Type P	
MeasurementFunction	Measurement Function		
Channels			
Count	Channel Count		
Name	Channel Name	P	
Channels[]			
Configure	Configure Channel	M	
Impedance	Impedance	P	
Coupling	Coupling	P	
Attenuation	Attenuation	P	
ConfigureLevel	Configure Level	M	
Level	Level	P	
Hysteresis	Hysteresis	P	
Slope	Slope	P	
FilterEnabled	Filter Enabled	P	
ConfigureFilter	Configure Filter	M	
MaximumFrequency	Maximum Frequency	P	
MinimumFrequency	Minimum Frequency	P	
Frequency			
Configure	Auto Configure Frequency	M	
ConfigureManual	Manual Configure Frequency	M	
Channel	Frequency Channel	P	
Estimate Frequency Estimate		P	
Resolution	Frequency Resolution	P	
ConfigureWithAperture	Configure Frequency with Aperture Time	M	
ApertureTime	Aperture Time		
AutoEstimate	Auto Frequency Estimate	P	
AutoResolution	Auto Frequency Resolution	P	
AutoApertureTime	PertureTime Auto Aperture Time		
Period			
Configure	Configure Period	M	
Channel	Period Channel	P	
Estimate	Period Estimate	P	

.NET Interface Hierarchy	Generic Name	<b>Type</b> P	
Resolution	Period Resolution		
ConfigureWithAperture	Configure Period with Aperture Time	M	
ApertureTime	Aperture Time	P	
PulseWidth	A		
Configure	Configure Pulse Width	M	
Channel	Pulse Width Channel	P	
Estimate	Pulse Width Estimate	P	
Resolution	Pulse Width Resolution	P	
OutyCycle			
Configure	Configure Duty Cycle	M	
Channel	Duty Cycle Channel	P	
FrequencyEstimate	Frequency Estimate	P	
Resolution	Duty Cycle Resolution	P	
EdgeTime			
Configure	Configure Edge Time	M	
Channel	Edge Time Channel	P	
Estimate	Edge Time Estimate	P	
Resolution	Edge Time Resolution	P	
HighReference	High Reference	P	
LowReference	Low Reference	P	
requencyRatio			
Configure	Configure Frequency Ratio	M	
NumeratorChannel	Numerator Channel	P	
DenominatorChannel	Denominator Channel	P	
FrequencyEstimate	Frequency Estimate	P	
Estimate	Frequency Ratio Estimate	P	
Resolution	Frequency Ratio Resolution	P	
Configure	Configure Time Interval	M	
StartChannel	Start Channel	P	
StopChannel	Stop Channel	P	
Estimate	Time Interval Estimate	P	
Resolution	Time Interval Resolution	P	
Delay	Time Interval Delay	P	

Table 13-5. IviCounter .NET Hierarchy				
.NET Interface Hierarchy	Generic Name	Туре		
InputChannel	Input Channel	P		
ReferenceChannel	Reference Channel	P		
FrequencyEstimate	Frequency Estimate	P		
Resolution	Phase Resolution	P		
otalizeContinuous				
Configure	Configure Continuous Totalize	M		
Channel	Continuous Totalize Channel	P		
Start	Zero and Start Totalize	M		
Stop	Stop Totalize	M		
FetchValue	Get Current Value	M		
TotalizeGated				
Configure	Configure Gated Totalize	M		
Channel	Gated Totalize Channel	P		
GateSource	Gate Source	P		
GateSlope	Gate Slope	P		
TotalizeTimed				
Configure	Configure Timed Totalize	M		
Channel	Timed Totalize Channel	P		
GateTime	Gate Time	P		
Arm				
Start				
Configure	Configure Start Arm	M		
Туре	Start Arm Type	P		
External				
Configure	Configure External Start Arm	M		
Source	External Start Arm Source	P		
Level	External Start Arm Level	P		
Slope	External Start Arm Slope	P		
Delay	External Start Arm Delay	P		
Stop	j			
Configure	Configure Stop Arm	M		
Type	Stop Arm Type	P		
External				
Configure	Configure External Stop Arm	M		
Source	External Stop Arm Source	P		
		•		

Tal	Table 13-5. IviCounter .NET Hierarchy		
.NET Interface Hierarchy	Generic Name	Type	
Slope	External Stop Arm Slope	P	
Delay	External Stop Arm Delay	P	
Measurement			
GetMeasurementComplete	Is Measurement Complete	M	
Read	Read	M	
Initiate	Initiate	M	
Fetch	Fetch	M	
Abort	Abort	M	
Voltage			
Configure	Configure Voltage	M	
Channel	Voltage Channel	P	
Estimate	Voltage Estimate	P	
Resolution	Voltage Resolution	P	

# 13.4.1 IviCounter .NET Interface Reference Properties

Interface reference properties are used to navigate the IviCounter .NET hierarchy. This section describes the interface reference properties that the IIviCounter interface defines.

Data Type	.NET Property Name
IIviCounterChannel	Channels[]
IiviCounterChannels	Channels
IIviCounterFrequency	Frequency
IIviCounterPeriod	Period
IIviCounterPulseWidth	PulseWidth
IIviCounterDutyCycle	DutyCycle
IIviCounterEdgeTime	EdgeTime
IIvicounterFrequencyRatio	FrequencyRatio
IIviCounterTimeInterval	TimeInterval
IIviCounterPhase	Phase
IIviCounterTotalizeContinuous	TotalizeContinuous
IIviCounterTotalizeGated	TotalizeGated
IIviCounterTotalizeTimed	TotalizeTimed
IIviCounterArm	Arm
IIviCounterArmStart	Arm.Start
IIviCounterArmStartExternal	Arm.Start.External
IIviCounterArmStop	Arm.Stop
IIviCounterArmStopExternal	Arm.Stop.External
IIviCounterMeasurement	Measurement
IIviCounterVoltage	Voltage

## **Appendix A Specific Driver Development Guidelines**

#### A.1 Introduction

This section describes situations driver developers should be aware of when developing a specific instrument driver that complies with the IviCounter class.

## A.2 Disabling Unused Extensions

Specific drivers are required to disable extension capability groups that an application program does not explicitly use. The specific driver can do so by setting the attributes of an extension capability group to the values that this section recommends. A specific driver can set these values for all extension capability groups when the cprefix>\_init, cprefix>\_InitWithOptions, or cprefix>\_reset functions execute. This assumes that the extension capability groups remain disabled until the application program explicitly uses them. For the large majority of instruments, this assumption is true.

Under certain conditions, a specific driver might have to implement a more complex approach. For some instruments, configuring a capability group might affect instrument settings that correspond to an unused extension capability group. If these instrument settings affect the behavior of the instrument, then this might result in an interchangeability problem. If this can occur, the specific driver shall take appropriate action so that the instrument settings that correspond to the unused extension capability group do not affect the behavior of the instrument when the application program performs an operation that might be affected by those settings.

The remainder of this section recommends attribute values that effectively disable each extension capability group.

#### Disabling the IviCounterFilter Extension Group

The IviCounterFilter extension group is disabled for a channel when the Channel Filter Enabled attribute is set to False.

#### Disabling the IviCounterTimeIntervalStopHoldoff Extension Group

Setting the attribute to zero effectively disables the IviCounterTimeIntervalStopHoldoff extension group.

#### Disabling the IviCounterVoltageMeasurement Extension Group

Some measurements that the user selects with the Measurement Function attribute require an extension group to further configure the measurement. The values for the Measurement Function attribute that require additional extension capability groups are shown in the following table.

- IVICOUNTER\_VAL\_DC\_VOLTAGE
- IVICOUNTER\_VAL\_MAXIMUM\_VOLTAGE
- IVICOUNTER\_VAL\_MINIMUM\_VOLTAGE
- IVICOUNTER\_VAL\_RMS\_VOLTAGE
- IVICOUNTER\_VAL\_PEAK\_TO\_PEAK\_VOLTAGE

When the Measurement Function attribute is set to one of these values, the IviCounterVoltageMeasurement Extension Group affects the behavior of the instrument. Otherwise, the extension capability group does not affect the behavior of the instrument and is effectively disabled. Therefore, this section does not recommend how to disable this extension capability group.

## Disabling the IviCounterEdgeTimeReferenceLevels Extension Group

Some reference level types that the user selects with the IviCounterEdgeTimeReferenceLevels ReferenceType attribute require an extension group to further configure the measurement. The values for the ReferenceType attribute that require additional extension capability groups are shown in the following table.

• IVICOUNTER\_VAL\_PERCENT\_REFERENCE\_TYPE

When the Reference Level attribute is set to one of these values, the IviCounterEdgeTimeReferenceLevels Extension Group affects the behavior of the instrument. Otherwise, the extension capability group does not affect the behavior of the instrument and is effectively disabled. Therefore, this section does not recommend how to disable this extension capability group.

## A.3 Query Instrument Status

Based on the value of the Query Instrument Status attribute, a specific driver may check the status of the instrument to see if it has encountered an error. In specific driver functions, the status check should not occur in the lowest-level signal generation functions Initiate, Abort, Fetch, and Fetch Count. These functions are intended to give the application developer low-level control over signal generation. When calling these functions, the application developer is responsible for checking the status of the instrument. Checking status in every function at this level would also add unnecessary overhead to the specific instrument driver.

## **Appendix B** Interchangeability Checking Guidelines

## **B.1** Introduction

IVI drivers might implement a feature called interchangeability checking. Interchangeability checking returns a warning when it encounters a situation where the application program might not produce the same behavior when the user attempts to use a different instrument.

## B.2 When to Perform Interchangeability Checking

Interchangeability checking occurs when all of the following conditions are met:

- The Interchange Check attribute is set to True
- The user calls one of the following functions.
  - Initiate
  - Read

## B.3 Interchangeability Checking of Measurement Function Attributes

There are attributes associated with most individual function values. Interchangeability checking is only performed on the attributes that correspond to the function that is enabled.

Table B.1 Attributes Values	s Enabled by the Measurement Function
Measurement Function Attribute Setting	Attributes Enabled
Frequency	
	Frequency Channel
	Frequency Estimate
	Frequency Resolution
	Aperture Time
	Frequency Estimate Auto
	Frequency Resolution Auto
Period	
	Period Channel
	Period Estimate
	Period Resolution
	Aperture Time
PulseWidth	
	Pulse Width Channel
	Pulse Width Estimate
	Pulse Width Resolution
DutyCycle	

Table B.1 Attributes Values	s Enabled by the Measurement Function
Measurement Function Attribute Setting	Attributes Enabled
	Duty Cycle Channel
	Duty Cycle Frequency Estimate
	Duty Cycle Resolution
EdgeTime	
	Edge Time Channel
	Edge Time Estimate
	Edge Time Resolution
	High Reference
	Low Reference
FrequencyRatio	
	Numerator Channel
	Denominator Channel
	Frequency Estimate for the Numerator Channel
	Frequency Ratio Estimate
	Frequency Ratio Resolution
TimeInterval	-
	Start Channel
	Stop Channel
	Time Interval Estimate
	Time Interval Resolution
	Time Interval Stop Holdoff
Phase	
	Input Channel
	Reference Channel
	Frequency Estimate
	Phase Resolution
TotalizeContinuous	
	Continuous Totalize Channel
TotalizeGated	
	Gated Totalize Channel
	Gate Source
	Gate Slope
TotalizeTimed	
	Timed Totalize Channel
	Gate Time

Table B.1 Attributes Values	s Enabled by the Measurement Function
Measurement Function Attribute Setting	Attributes Enabled
DC Voltage, Maximum Voltage, Minimum Voltage, RMS Voltage, Peak-to-Peak Voltage	
	Voltage Channel
	Voltage Estimate
	Voltage Resolution

## **B.4** Interchangeability Checking Rules

Interchangeability checking is performed on a capability group basis. When enabled, interchangeability checking is always performed on the base capability group. In addition, interchangeability checking is performed on each extension capability group that the application program uses. An extension capability group is considered to be used by the application program after any of the following occur:

- The application program calls a function that belongs to the extension capability group.
- The application program accesses an attribute that belongs to the extension capability group.
- The application program sets an attribute in another capability group to a value that requires the presence of the extension capability group.

If the user has never set any attributes of an extension capability group, interchangeability checking is not performed on that group. In general interchangeability warnings are generated if the following conditions are encountered:

- An attribute that affects the behavior of the instrument is not in a state that the user specifies.
- The user sets a class driver defined attribute to an instrument-specific value.
- The user configures the value of an attribute that the class defines as read-only. In a few cases the class drivers define read-only attributes that specific drivers might implement as read/write.

### IviCounterFilter Extension Group

If the Filter Frequencies attributes have not been set or the Filter is disabled then the following attributes are not required to be in a user specified state:

- Minimum Frequency
- Maximum Frequency

## IviCounterTimeIntervalStopHoldoff Extension Group

If the Time Interval Stop Holdoff attribute has not been set or the Time Interval Stop Holdoff is disabled, then the following attribute is not required to be in a user specified state:

• Time Interval Stop Holdoff

#### IviCounterVoltageMeasurement Extension Group

The interchangebility rules for this extension group are defined in the table in the previous section.

terEdgeTimeReferenceLevels Extension Group  The interchangebility rules for this extension group are defined in the table in the previous section.				